

ANFIM[®]

ANFIM srl

Via B. Verro, 33/5 - 20141 MILANO - ITALY
Tel. (+39) 02/8465054 - Fax (+39) 02/8464401
e-mail: info@anfim.it - website : www.anfim.it

INSTRUCTION MANUAL

Mod.:

BEST ON DEMAND ELECTRONIC STEPLESS



COFFEE GRINDER



BEST - ON DEMAND ELECTRONIC-ST

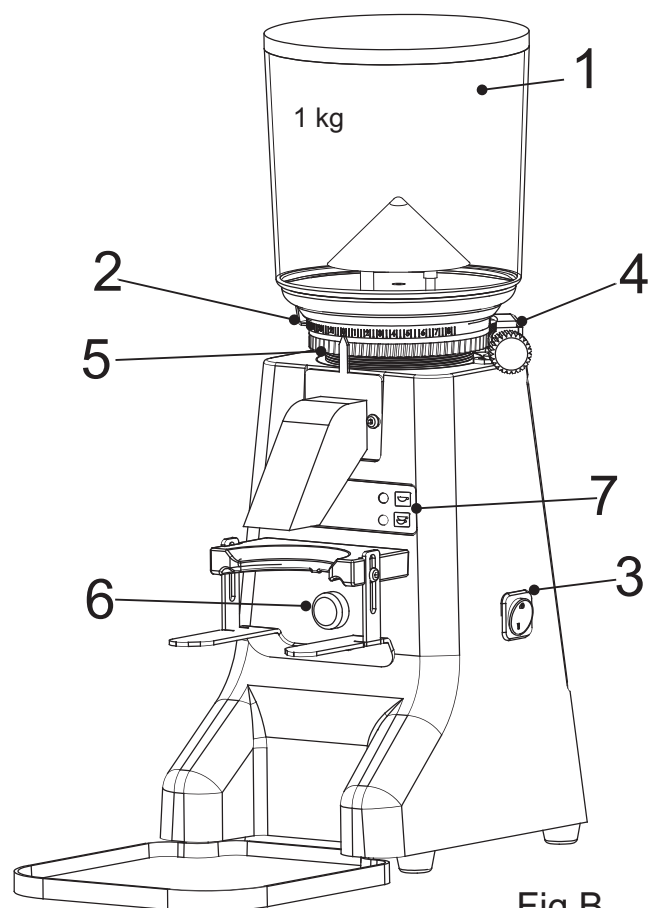


Fig.B

BEST - ON DEMAND ELECTRONIC-ST

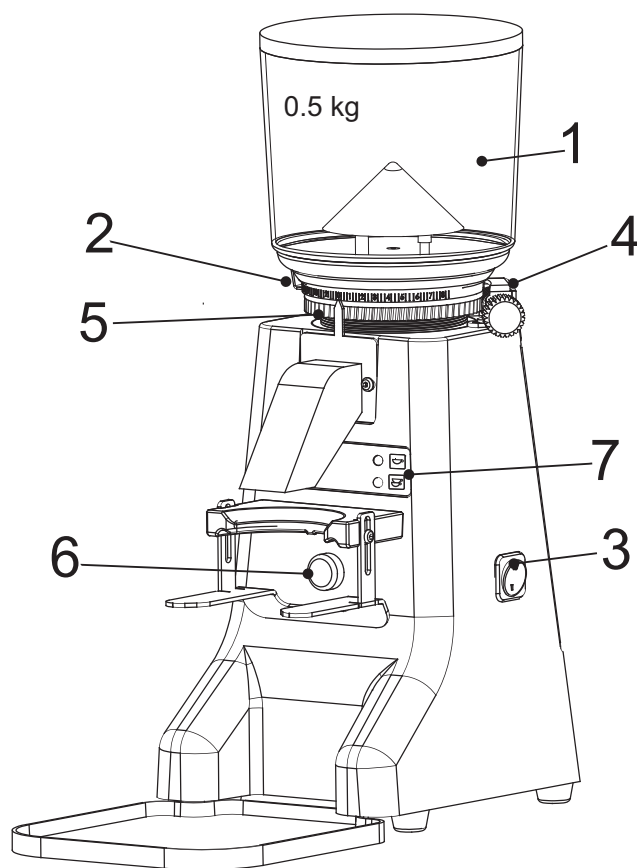


Fig.A

The drawing of this manual has been edited by A N F I M Technical Department. All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means - microfilm, photocopying or otherwise - without written permission of A N F I M srl.

Published: March 2019

This device, like all electrical products, must be disposed separately from municipal sorted waste, at specific collection points designated by the local council.



1. General instructions

Read this instruction booklet carefully before using the coffee grinder.
The installation of the coffee grinder must be done by qualified personnel.
The firm cannot be held responsible for changes made by the user to the appliance and for accidental damages arising from installations and / or utilizations different from those mentioned in these instructions.
The producer reserves the right to change without notice the characteristics of the equipment presented in these instructions.

1.1 Appropriate usage

The coffee grinder with dosing system has been developed and built to grind and dose coffee.

1.2 Improper usage

Any kind of usage different from what is described in paragraph 1.1 is considered improper and therefore unauthorized; the manufacturer refuses all responsibility for damages arising from improper usage of the coffee grinder described in this instruction manual.

1.3 Safety standards

Do not use the coffee grinder without fixing the hopper for coffee beans on to the top flange using the provided screws.

Always unplug the coffee grinder before cleaning.

Do never immerse the coffee grinder in water and/or other liquids. For cleaning do not use water jet or steam cleaner.

The device should not be used by people (including children) with reduced, sensory or mental capabilities, or lack of experience and knowledge, unless they are carefully supervised/monitored and instructed;

- Do not allow children to play with the appliance.
- This appliance can be used by children aged over 8 years if they have supervision or are given instruction on the proper use of the appliance so usage can be considered safe and they understand possible risks involved.
- Cleaning and maintenance should not be performed by children unless they are older than 8 years and carefully supervised.
- Keep the appliance and electrical cords out of reach of children, at all times especially if less than 8 years old.
- These appliances are intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals, and in commercial enterprises such as bakeries, butcheries, etc., but not for continuous mass production of food.

2. Transport

2.1 Packaging



The **ANFIM** coffee grinder with dosing system is supplied in a special cardboard package; each package contains:

Coffee grinder with dosing system, Instruction booklet, Evidence of conformity



2.2 Handling of the appliance

The coffee grinder does not need special tools for its operating
It can be operated manually.

3. Description of the appliance

3.1 Description of the appliance

The coffee grinder has been developed and built to comply with a modern environment of a coffee shop making life easy and convenient for the barista to grind and dose coffee into a porta-filter in order to prepare a cup of coffee.

Description:

Housing panel powder coated.

Hardened steel grinding discs.

Hopper for coffee beans.

Discharge tube for delivery of ground coffee into porta-filter.

Power supply in conformity with 2006/95/EEC Directives.

Control unit for programming coffee dose.

3.2 Description of the controls

The coffee grinder is provided with the following control devices:

- 1 - Coffee bean hopper.
- 2 - Hopper slide.
- 3 - Illuminated ON/ OFF switch.
- 4 - Grind adjustment Stepless.
- 5 - Blade adjustment ring.
- 6 - Activation switch porta-filter.
- 7 - Touch panel.

3.3 Emergency stop controls

In compliance with the safety article indicated in the EN 418 standards, the coffee grinder is not equipped with an emergency stop because this function is provided by the illuminated **ON/OFF** switch. **(3)**

3.4 Table of specifications:

TYPE	BEST-OD-EL-ST	(Hopper 1 Kg.)
Height:	380 mm	540 mm
Width:	145 mm	145 mm
Depth:	300 mm	300 mm
Power:	300 W	300 W
Noise level:	< 70 dB(A)	< 70 dB(A)
Blades diameter:	54 mm ANFIM®	54 mm ANFIM®
Weight:	7,5 kg	7,7 kg.

4. Installation of the appliance

4.1 Installation of the appliance

The coffee grinder must be placed on a flat solid and dry surface.

4.2 Connecting the appliance to the mains

Single-phase 220/240V version (110V on request)

The coffee grinder is supplied with an electric cord and a moulded plug and must be connected only by an authorized electrician to a power socket (max. rating 15A). That is in compliance with the data printed on the serial number plate of the grinder located either on the rear side or on the bottom plate of the grinder.



WARNING:

The electric installation to which the coffee grinder will be connected must be in compliance with the law in force.

The manufacturer refuses all responsibility for damages and injuries to persons that might occur due to improper installation and/or improper electric power installation not in compliance with local safety standards.

5. Using the appliance

5.1 Instructions for use

A) Fill the hopper with fresh coffee beans. The maximum capacity of the hopper is approx 0,5 kg. (Fig.A) - Optional 1 kg. (Fig.B).

B) Open the hopper slide.

C) Turn the ON/OFF switch on (3). It will light up and coffee grinder is now ready for operation. The display will show "Dose 1 cup" or "Dose 2 cups" according to last selection.

The device is equipped with "Time Lag" function. The delay time is pre-set to 5 seconds. For the operation and setting of this cycle, refer to: **Explanation and Adjustment of "Time Lag"** see (page 5).

D) Insert porta-filter and push against activation switch (6) to start grinding cycle.

Basic calibration is done in the factory. To adjust the grind setting during operation, proceed as follows:

For stepless adjustment:

- Turn black wheel (4, Fig. A/B) clockwise to set the grind setting finer
 - Turn black wheel (4, Fig. A/B) counter-clockwise to set the grind setting coarser
- Please note that grind setting should be adjusted:
- finer in case of low humidity
 - coarser in case of high humidity

The coffee grinder is adjusted at the factory for a dose that corresponds to approx.

Default settings		BEST-OD-EL-ST
Dosing time for one cup:	7 g	5,7 seconds
Dosing time for two cups:	14 g	11,2 seconds

Setting grinding time for either 1 or 2 cups.

- To change the grinding time for 1 cup, push and hold key for 1 cup on touch pad until time for a single shot is flashing. Release key.
- To increase grinding time by steps of 0.1 sec, push briefly key for 1 cup on touch pad.
- To decrease grinding time by steps of 0.1 sec, push briefly key for 2 cups on touch pad.
- New settings will be saved automatically if no action on touch pad is taken for 3 sec. Set time is no longer flashing and grinder is ready for operation.
- To change grinding time for 2 cups, push and hold key for 2 cups on touch pad until time for a double shot is flashing. Release key.
- To increase or decrease grinding time, pls follow above procedure for 1 shot.

Explanation and Adjustment of "Time Lag"

This new feature added, is linked to the operation of the grinder that is equipped with an activation switch for the porta-filter.

The delay time can be adjusted and is used to offer to the operator the option to complete the shot if the grinding cycle was briefly interrupted to settle ground coffee in the porta-filter.

The Time Lag **can be changed**, every moment you need.

Press both keys for **1** and **2** cups, keep them pressed until the display is flashing, showing the preset time **"5"** seconds.

To Increase timing, push briefly 1 cup key.

To Decrease it by pressing the key 2 cups.

After a few seconds of inactivity the time will be memorized.

The grinder will return to the operating mode displaying the time related to 1 or 2 cups.

5.2 Instructions for Emergency Stop

In case of emergency, if you switch off the ON/OFF switch (3) the coffee grinder stops immediately.

6. Maintenance

6.1 Safety standards

- Do not insert fingers or other objects in the entry hole of the blades or in the outlet of the ground coffee.
- Do not put ground coffee in the hopper.
- Do not immerse the coffee grinder in water and/or other liquids (solvents, detergents, and so on).

In any case, always refer to the Customer Service Centre of ANFIM.
When the machine is not in use (outside normal working hours/when closed during holidays, etc.) always switch off the illuminated ON/OFF switch (3).

6.2 Appliance cleaning

WARNING: Disconnect the coffee grinder from the mains before cleaning.
Do never immerse the coffee grinder in water and/or other liquids.

Regular cleaning once a week helps to preserve the unique aroma and taste of your espresso and to avoid accumulation of oils and coffee dust in the hopper and on the grinder.

Cleaning Instructions:

- a) Disconnect the coffee grinder from the mains.
- b) Clean the empty hopper with a dry soft cloth (in- & outside).
- c) Clean the discharge tube with a soft brush and wipe off any grounds inside the tube.
- d) Wipe off coffee powder or other dirt from the grinding housing by using a dry soft cloth.
- e) Connect the coffee grinder to the mains.

6.3 Scheduled inspections

It is recommended to check the grinder at least once every 6 months to make sure it performs the best possible way ensuring a perfect grind and dosing consistency. Contact your nearest authorised Anfim Service Centre for more information.

- a) Check grind setting and adjust 2-3 a day, if necessary.
- b) Ask your nearest Anfim service dealer to check the grinding discs for wear & tear and have them replaced after grinding 400-500kg (Anfim steel discs).
- c) Ask your nearest Anfim service dealer to check for regular wear & tear and to replace worn parts, in case of need.

7. Servicing

7.1 Instructions for service request

All technical interventions must only be performed by authorized personnel of

Anfim or one of its authorised service dealers.

ANFIM

Via B. Verro 33/5 - 20141 MILANO
Tel. (+39) 02/8465054 Fax. (+39) 02/8464401
e-mail: info@anfim.it - website: www.anfim.it

DECLARATION OF CONFORMITY

The undersigned **ANFIM** Via B.Verro, 33/5 - 20141 Milan – Italy, declares, on its own responsibility that the coffee grinder with on demand system,

Model. **B E S T - O D - E L - S T** Serial-number



to which this declaration refers, is in compliance with the following standards or other corresponding documents: **EN ISO 12100, IEC 60335-2-64, IEC 60335-1**, according to what is provided for by the **2006/42/CEE** directive.

MILAN, 28 March 2019

ANFIM Srl

A handwritten signature in blue ink, appearing to be a stylized 'G' or 'F'.

Authorized reseller