


## Ascent Touch Parts Manual

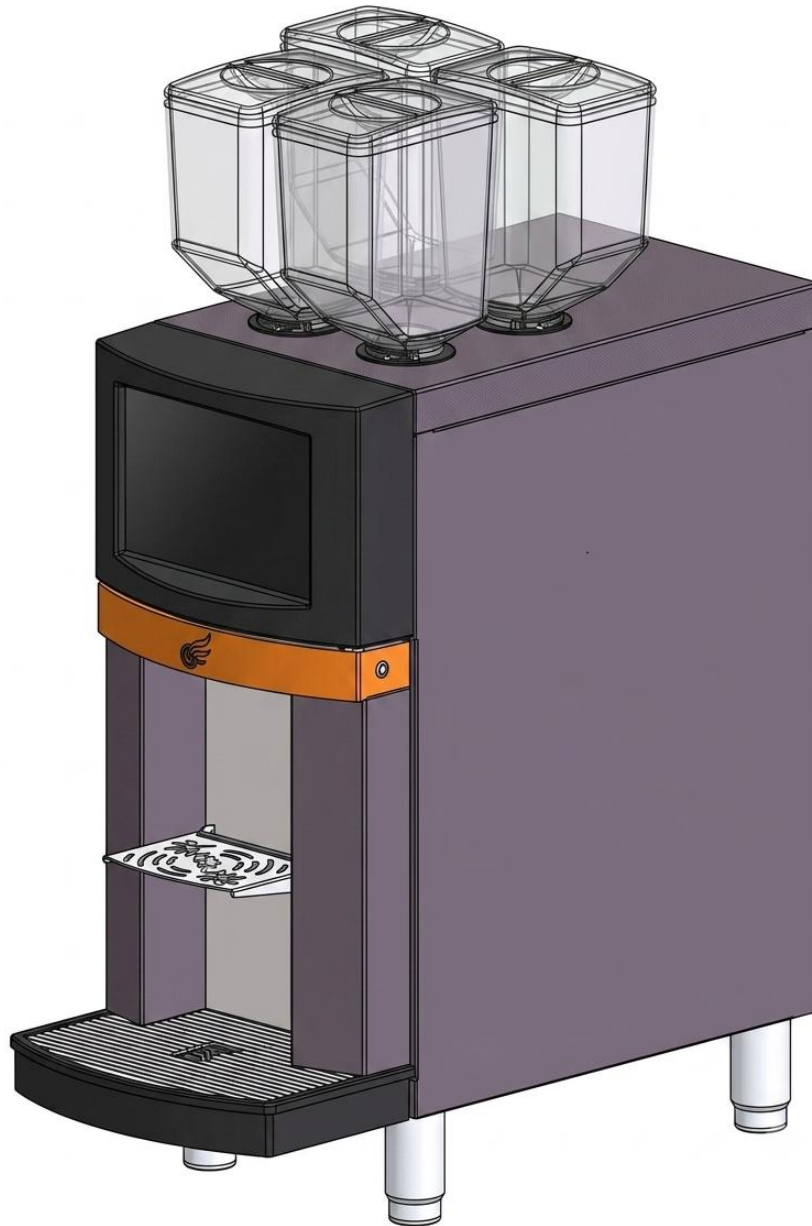

## Recommended Tools List

|                               |                          |
|-------------------------------|--------------------------|
| #1 Phillips screwdriver       | 1/4" nut driver          |
| #2 Phillips screwdriver       | Needle-nosed pliers      |
| #2 Phillips short screwdriver | Tubing cutter            |
| Standard flat screwdriver     | Wire cutter              |
| Small flat screwdriver        | Non-metal cleaning brush |
| 9/16" Wrench                  | Digital multi-meter      |
| 1/2" Wrench                   | Adjustable wrench        |
| 7/16" wrench                  |                          |

## Misc. Parts

|          |                                          |
|----------|------------------------------------------|
| 3900-021 | BRUSH BREW CLEAN                         |
| 3400-037 | JAR GRP CLEANER ASCENT W/ PHOSPHATE FREE |
| 2790-286 | CLEAN TUBE                               |
| 2790-261 | ASSEMBLY INPUT TUBING                    |
| 1250-010 | HOSE DRAIN RUBBER                        |
| 1454-026 | CLAMP HOSE DRAIN                         |
| 2230-109 | ASSEMBLY BEAN HOPPER GRAY                |
| 1120-486 | STOPPER HOPPER                           |
| 4100-003 | TOOL PIN REMOVAL MEDIUM                  |
| 4100-024 | TOOL RETAINING RING                      |

## Contact & Support Details

Company Name: Concordia Beverage Systems

Address: 851B SW 34th St, Renton, WA 98057

Parts Email : [partsandservice@middlebycoffee.com](mailto:partsandservice@middlebycoffee.com)


Customer Service : [customer\\_service@middlebycoffee.com](mailto:customer_service@middlebycoffee.com)

## Contents

|                                                      |    |
|------------------------------------------------------|----|
| Recommended Tools List.....                          | 2  |
| Misc. Parts.....                                     | 2  |
| Contact & Support Details.....                       | 2  |
| Diagram 1: Machine Overview Front.....               | 4  |
| Parts List 1: Machine Overview Front.....            | 5  |
| Diagram 2: Machine Overview Rear.....                | 6  |
| Parts List 2: Machine Overview Rear.....             | 7  |
| Diagram 3: Front Door Assembly   2510-330.....       | 8  |
| Diagram 3: Front Door Assembly (Rear).....           | 9  |
| Parts List 3: Front Door Assembly.....               | 10 |
| Diagram 4: Brew Group Assembly   2180-051.....       | 11 |
| Parts List 4: Brew Group Assembly.....               | 12 |
| Diagram 5: Brew Chamber Assembly   2180-CAT-001..... | 13 |
| Parts List 5: Brew Chamber Assembly.....             | 14 |
| Diagram 6: Upper Piston Assembly   2180-050.....     | 15 |
| Parts List 6: Assembly – Upper Piston.....           | 16 |
| Diagram 7: Lower Piston Assembly   2180-049.....     | 17 |
| Parts List 7: Lower Pison Assembly.....              | 18 |
| Diagram 8: Linear Drive Assembly.....                | 19 |
| Parts List 8: Linear Drive Assembly.....             | 20 |
| Diagram 9: Double Grinder Assembly   2180-039.....   | 21 |
| Parts List 9: Double Grinder Assembly.....           | 22 |
| Diagram 10: Water Pump Assembly   2710-CAT-001.....  | 23 |
| Parts List 10: Water Pump Assembly.....              | 24 |
| Diagram 11: Hot Water Tank Assembly   2720-071.....  | 25 |
| Parts List 11: Hot Water Tank Assembly.....          | 26 |
| Diagram 12: Touchscreen Assembly   2640-CAT-001..... | 27 |
| Parts List 12: Touchscreen Assembly.....             | 28 |
| Diagram 13: Electrical Assembly   2600-002.....      | 29 |
| Parts List 13: Assembly Electrical AT.....           | 30 |
| Part Warranty.....                                   | 31 |

**NOTE: All assemblies are highlighted in orange. This means they need to be assembled by the production team.**


## Diagram 1: Machine Overview Front

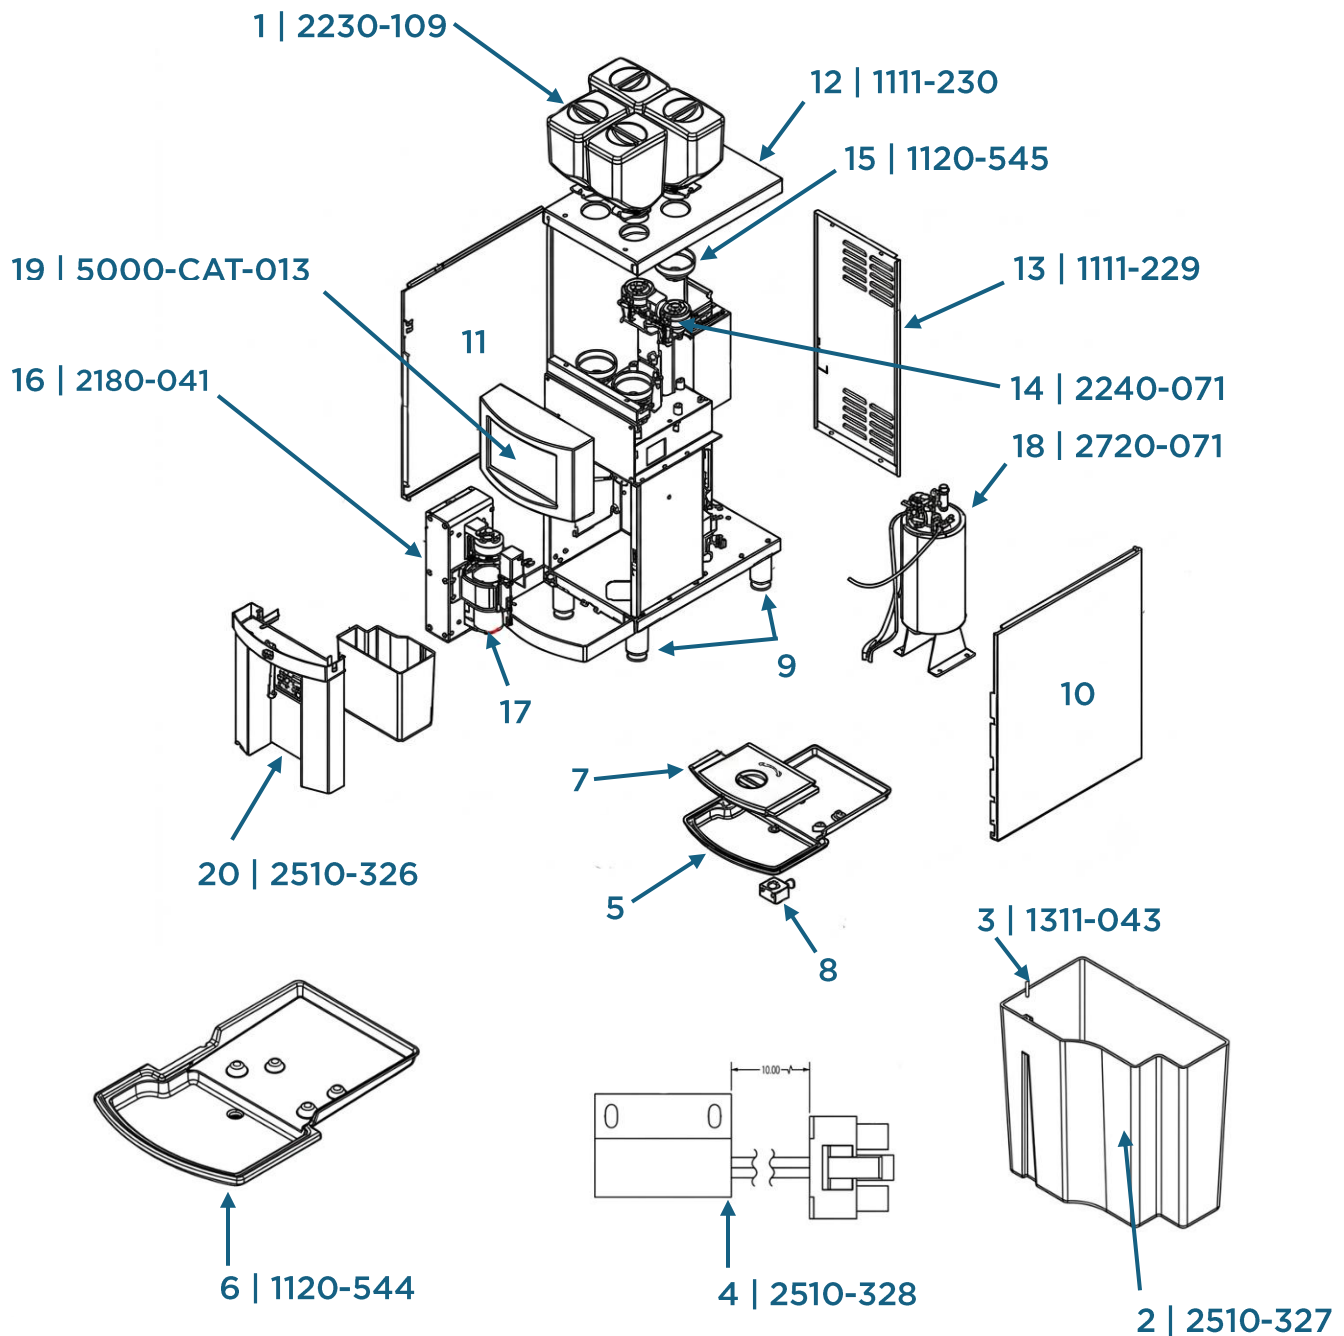

## Parts List 1: Machine Overview Front

| Diagram<br>1 Item # | Description                             | Qty | Concordia Part<br>Number |
|---------------------|-----------------------------------------|-----|--------------------------|
| 1                   | ASSY BEAN HOPPER GRAY                   | 4   | 2230-109                 |
| n/a                 | HOPPER GRAY                             | 4   | 1120-556                 |
| n/a                 | LID HOPPER GRAY                         | 4   | 1120-557                 |
| n/s                 | O-RING BEAN HOPPER                      | 4   | 1260-090                 |
| n/s                 | STOPPER HOPPER                          | 4   | 1120-486                 |
| 2                   | ASSY DREGS BIN W MAGNET AT              | 1   | 2510-327                 |
| 3                   | MAGNET CLY 1/8OD X 3/4L                 | 1   | 1311-043                 |
| 4                   | ASSY SWITCH MAG AT                      | 1   | 2510-328                 |
| 5                   | DRAIN TRAY STD AT                       | 1   | 1120-543                 |
| 6                   | DRAIN TRAY CHUTE AT                     | 1   | 1120-544                 |
| 7                   | DRAIN GRATE WIRE AT                     | 1   | 1111-211                 |
| 8                   | ASSY - DRAIN BLOCK - 2000               | 1   | 2790-031                 |
| 9                   | LEG EQUIPMENT MODEL AB50                | 4   | 1240-064                 |
| 10                  | PNL SKIN RIGHT AT                       | 1   | 1111-227                 |
| 11                  | PNL SKIN LEFT AT                        | 1   | 1111-232                 |
| 12                  | PANEL TOP AT                            | 1   | 1111-230                 |
| 13                  | PNL SKIN BACK AT                        | 1   | 1111-229                 |
| 14                  | ASSY GRINDER DUAL AT                    | 1   | 2240-071                 |
| 15                  | FUNNEL GRINDER AT                       | 1   | 1120-545                 |
| 16                  | ASSY KEYED DRIVE                        | 1   | 2180-041                 |
| 17                  | SLEEVED CHAMBER                         | 1   | 2180-044                 |
| 18                  | ASSY TANK WATER AT                      | 1   | 2720-071                 |
| 19                  | TOUCHSCREEN AT HLUI                     | 1   | 2640-CAT-001             |
| 20                  | ASSY FRONT DOOR AT                      | 1   | 2510-326                 |
| n/a                 | O-RING DRAIN BLOCK                      | 1   | 1260-052                 |
| n/s                 | ASSY CHUTE AT                           | 2   | 2510-331                 |
| n/s                 | ASSY PEEK BREW GROUP SLVED AT W/ GUTTER | 1   | 2180-051                 |


## Diagram 2: Machine Overview Rear

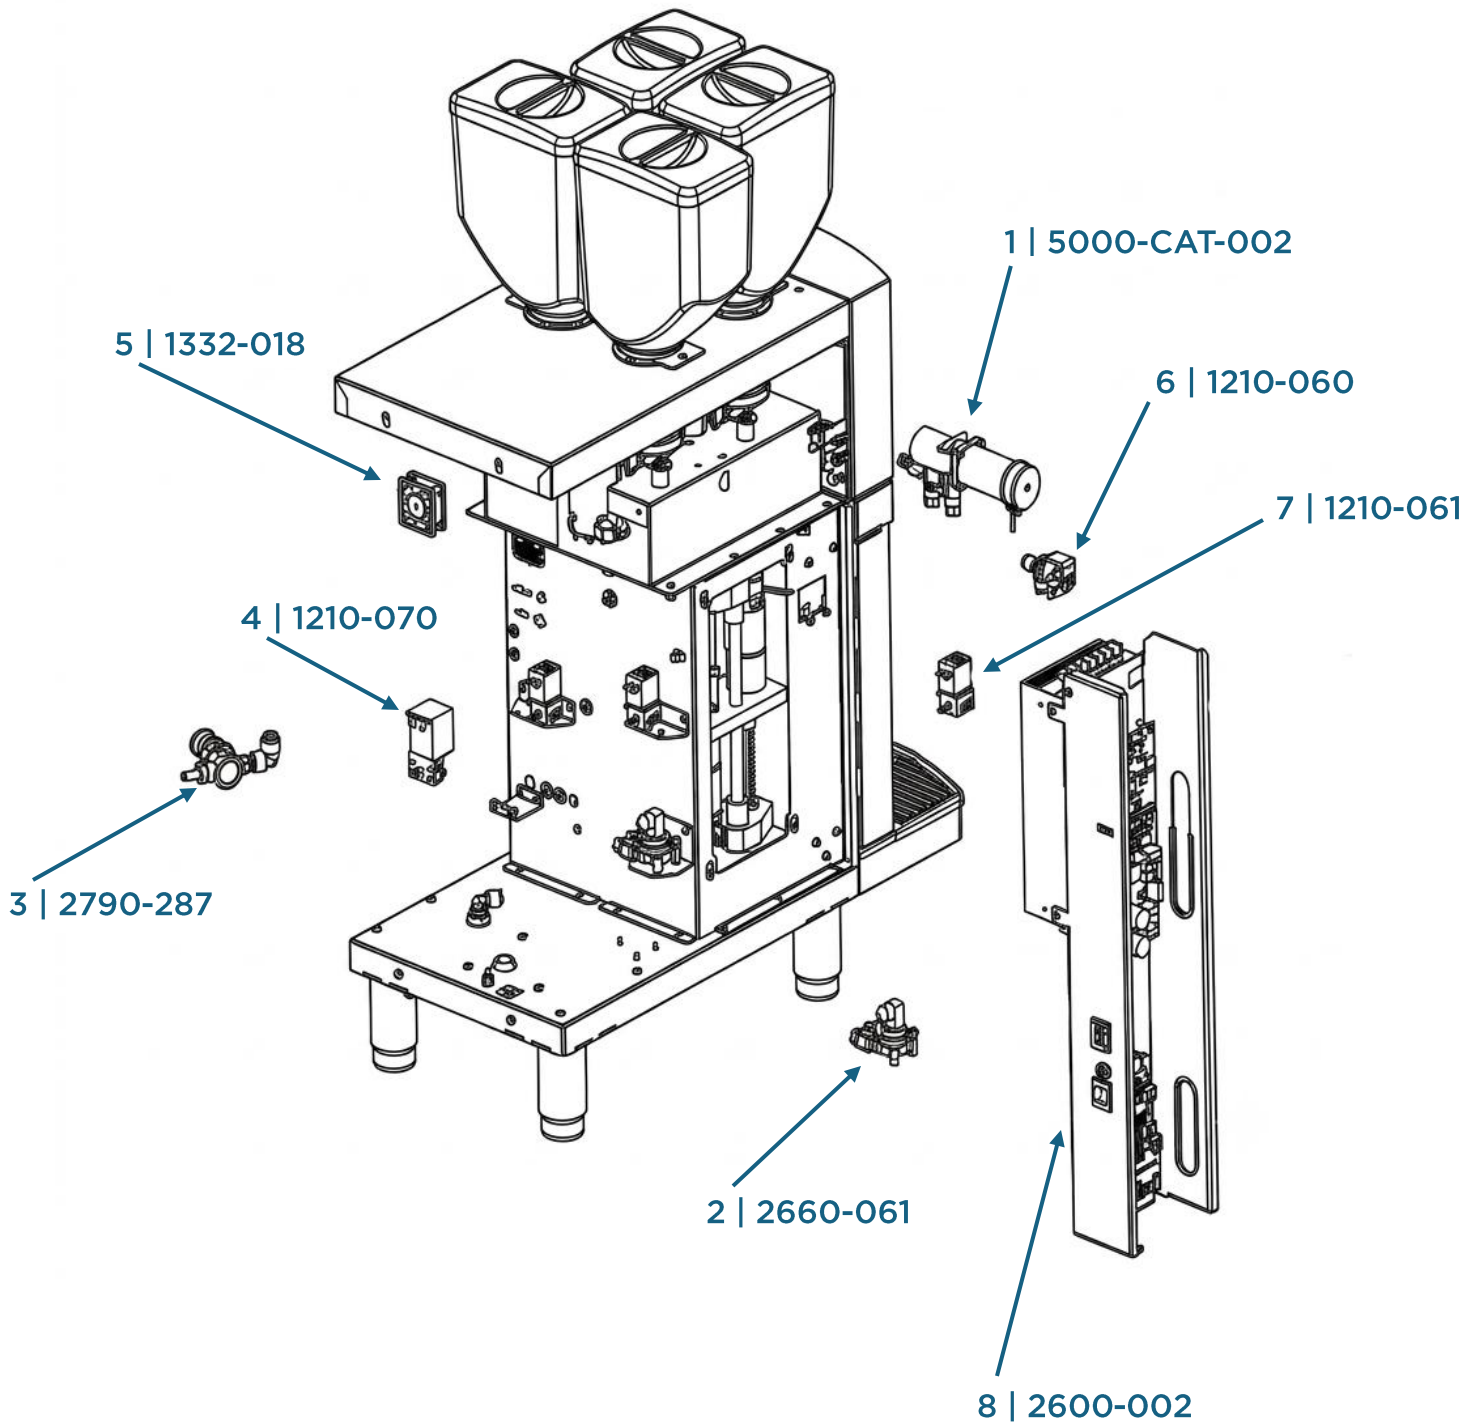


## Parts List 2: Machine Overview Rear

| Diagram<br>2 Item # | Description                | Qty | Concordia Part<br>Number |
|---------------------|----------------------------|-----|--------------------------|
| 1                   | KIT AT FLUID-O-TEC WTR PMP | 1   | 5000-CAT-002             |
| 2                   | ASSY 2.5MM FLOW METER AT   | 2   | 2660-061                 |
| 3                   | ASSY PRESSURE REGULATOR AT | 1   | 2790-287                 |
| 4                   | VALVE DEINER ISOLATION AT  | 1   | 1210-070                 |
| 5                   | FAN AXIAL 24VHD 50X20MM AT | 1   | 1332-018                 |
| 6                   | VALVE ISOLATION RPE AT     | 1   | 1210-060                 |
| 7                   | VALVE 16 BAR BUSCHJOST AT  | 3   | 1210-061                 |
| 8                   | ASSY ELECTRICAL AT         | 1   | 2600-002                 |

## Diagram 3: Front Door Assembly | 2510-330

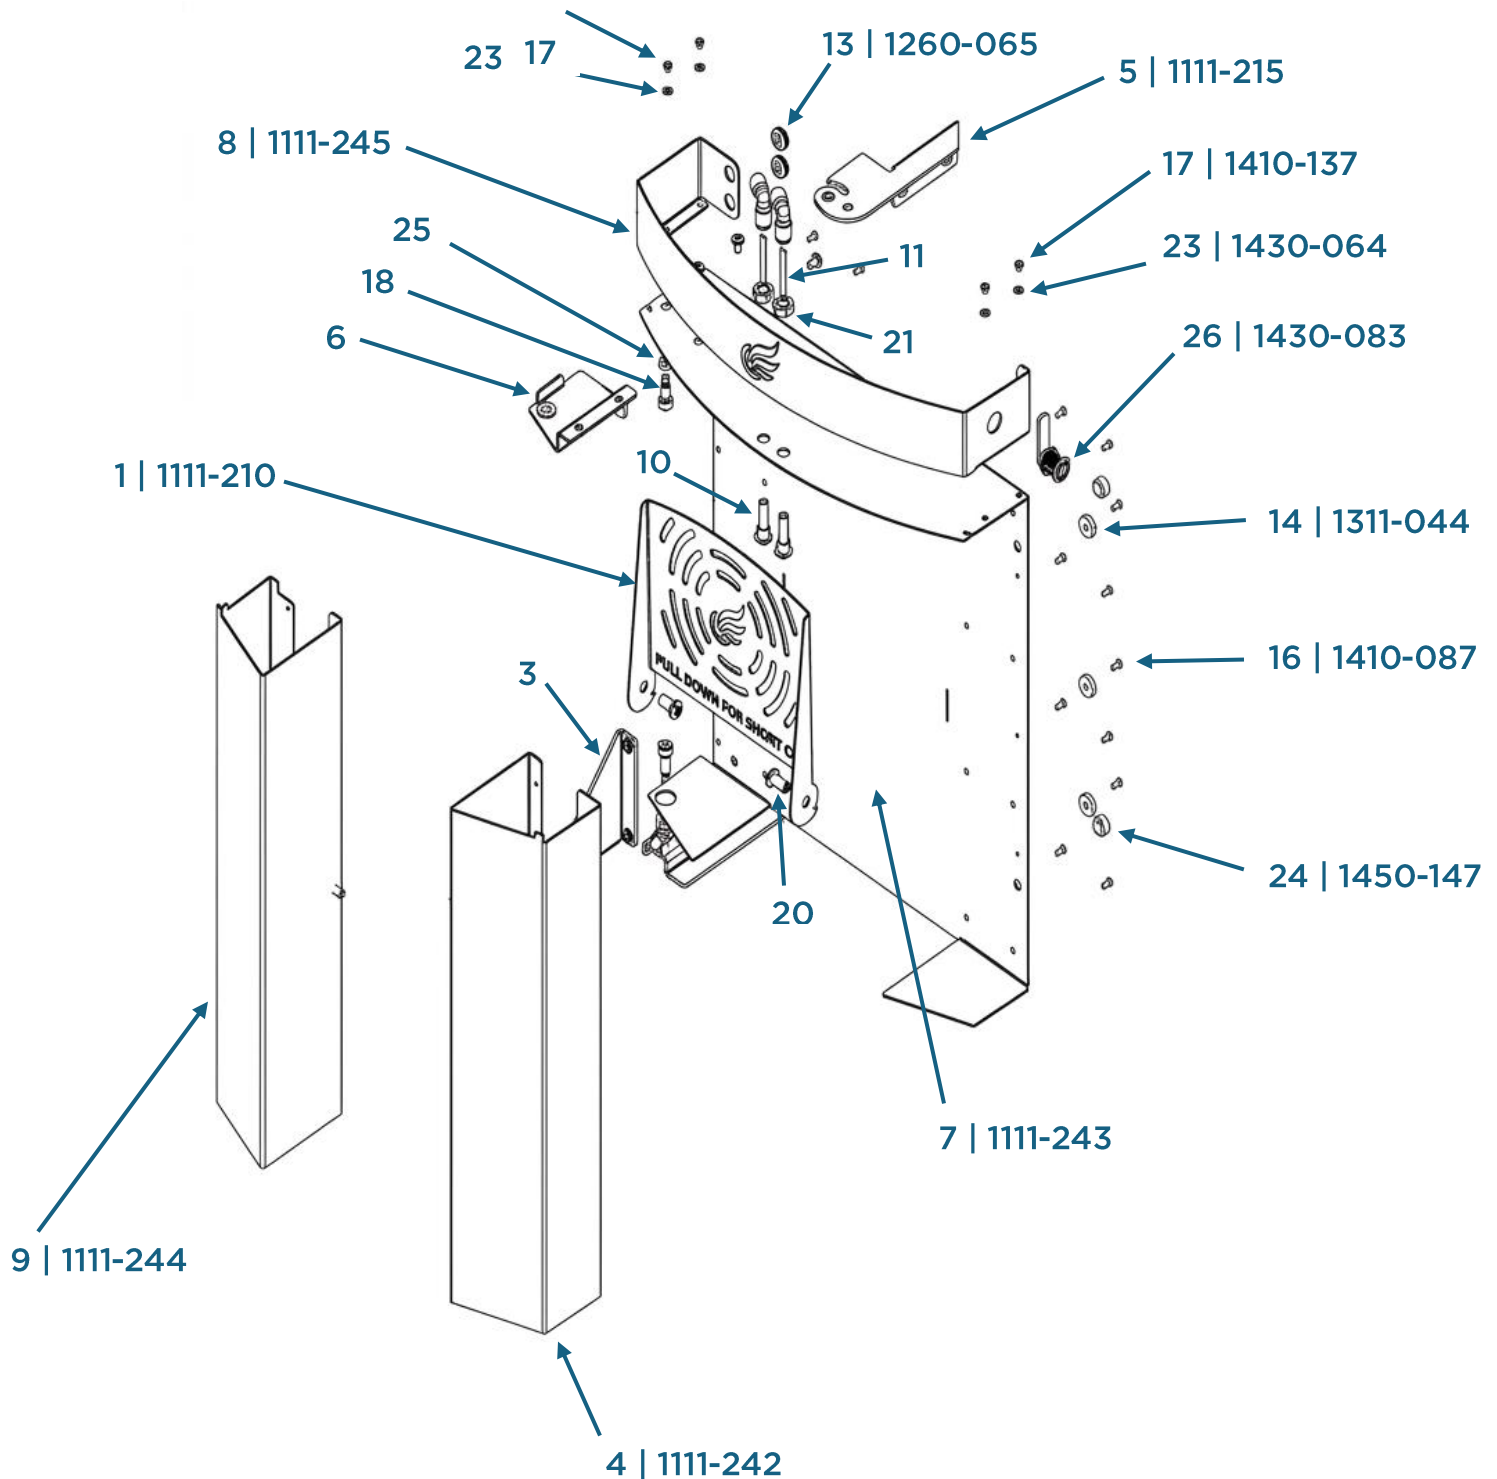

## Diagram 3: Front Door Assembly (Rear)

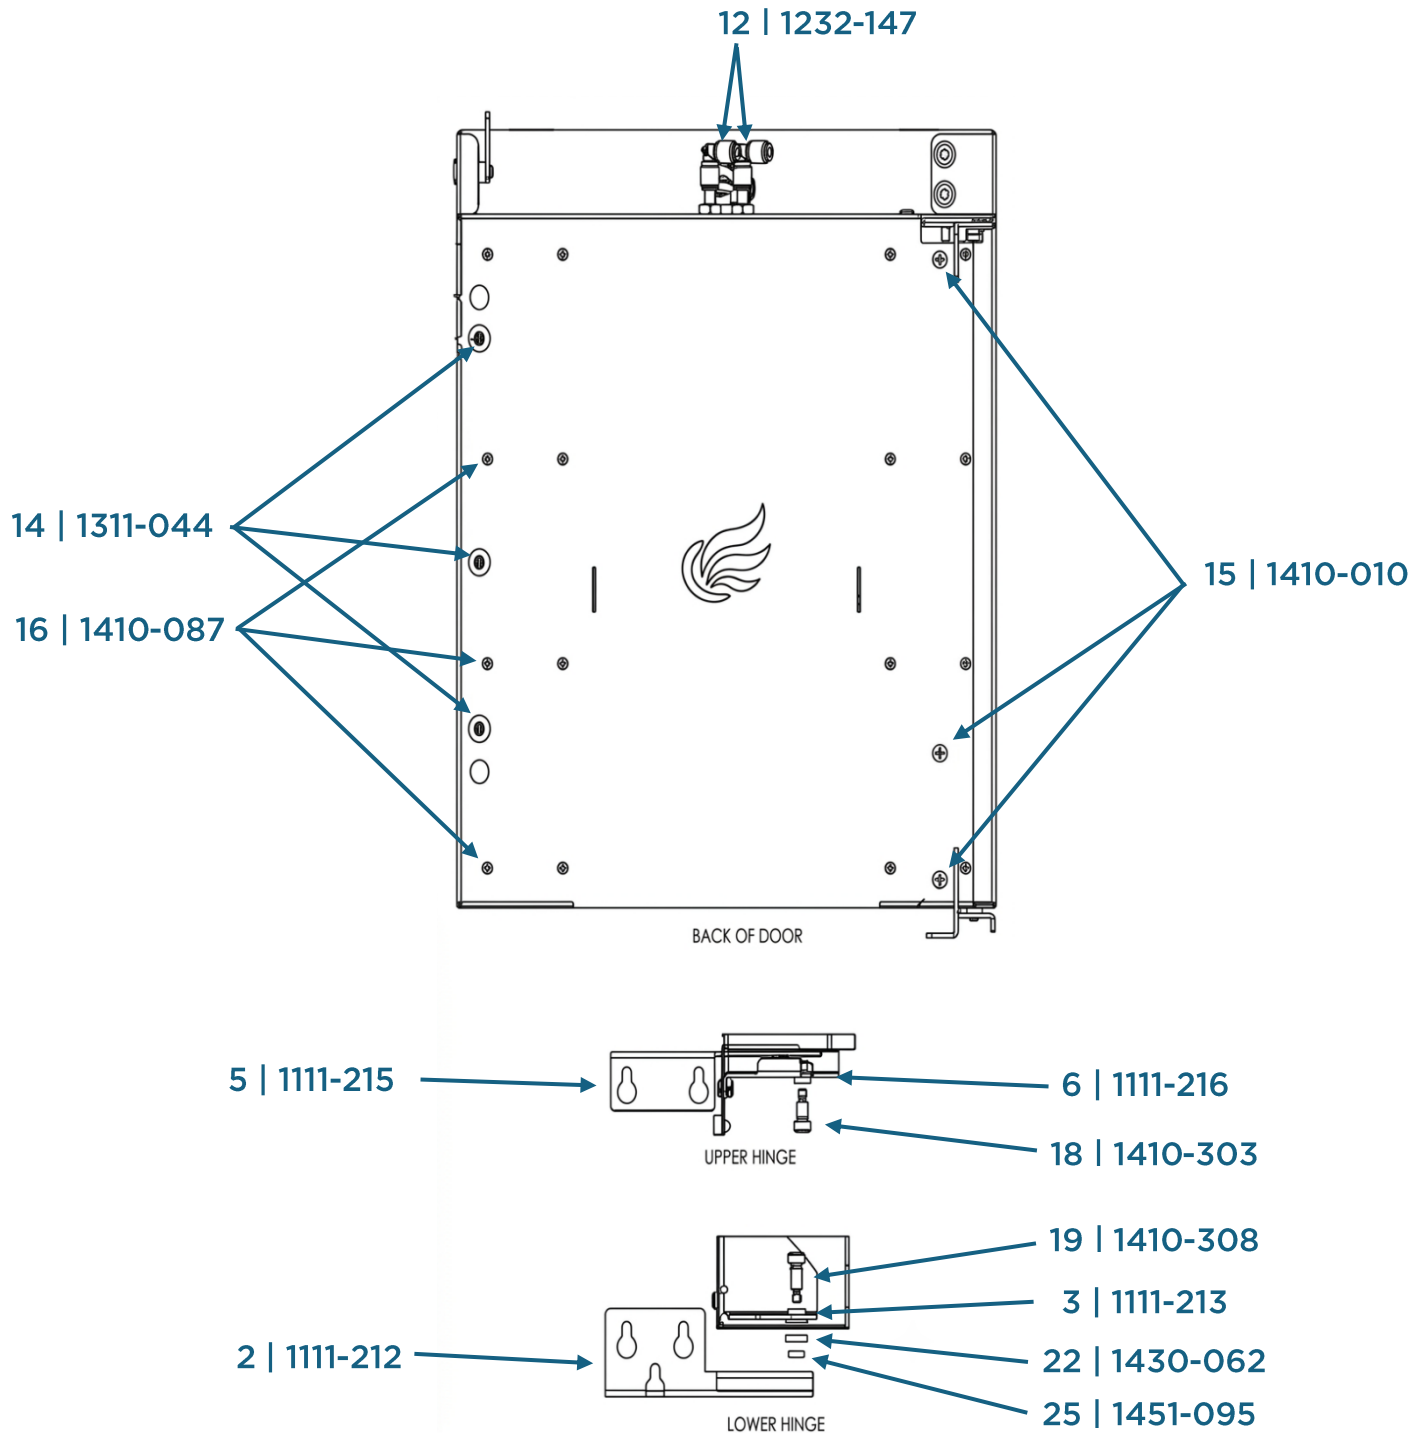


## Parts List 3: Front Door Assembly

| Diagram<br>3 Item # | Description                 | Qty | Concordia<br>Part Number |
|---------------------|-----------------------------|-----|--------------------------|
| Assembly            | ASSY FRONT DOOR 24OZ AT     | 1   | 2510-330                 |
| 1                   | PLATFORM CUP AT             | 1   | 1111-210                 |
| 2                   | BRKT HINGE LOWER AT         | 1   | 1111-212                 |
| 3                   | BRKT DOOR LOWER AT          | 1   | 1111-213                 |
| 4                   | PANEL TRIM RIGHT 24OZ AT    | 1   | 1111-242                 |
| 5                   | BRKT HINDGE UPPER AT        | 1   | 1111-215                 |
| 6                   | BRKT DOOR LOWER AT          | 1   | 1111-216                 |
| 7                   | PANEL BACK DOOR 24OZ AT     | 1   | 1111-243                 |
| 8                   | STRIP TRIM DOOR LOCK AT     | 1   | 1111-245                 |
| 9                   | PANEL TRIM LEFT 24OZ AT     | 1   | 1111-244                 |
| 10                  | NOZZLE DISPENSE AT          | 2   | 1120-553                 |
| 11                  | STRIP FLOW STRAIGHTENER     | 2   | 1120-558                 |
| 12                  | ELBOW LEGRIS 6MM FX4MM F    | 2   | 1232-147                 |
| 13                  | GROMS 5/32ID X 3/8GDX X 1/6 | 2   | 1260-065                 |
| 14                  | MAGNETS CS 1½ OD X 1/8      | 3   | 1311-044                 |
| 15                  | PH PHIL MS SS 8-32 X 1/4    | 5   | 1410-010                 |
| 16                  | FH MS SS UCT 4-40 X 1/4     | 19  | 1410-087                 |
| 17                  | PH PHIL SS 4-40 X 1/8       | 4   | 1410-137                 |
| 18                  | SCREW SHLDR SS.25D X 3/8L   | 1   | 1410-303                 |
| 19                  | SCREW SHLDR SS.25D X.5L     | 1   | 1410-308                 |
| 20                  | NUT BARREL SS 10-24.5L      | 2   | 1420-050                 |
| 21                  | NUT JAM NYLON 5/16-18       | 2   | 1420-051                 |
| 22                  | WASHER NYLON                | 1   | 1430-062                 |
| 23                  | WASHER INT TOOTH LOCK #4    | 4   | 1430-064                 |
| 24                  | BUMPER SBR RUBBR            | 2   | 1450-147                 |
| 25                  | SPCR SS.375X.192X.094L      | 2   | 1451-095                 |
| 26                  | WASHER NYLON .25ID .187L    | 1   | 1430-083                 |

**NOTE: If your door assembly is different, you must order 2510-330 for the complete assembly.**


## Diagram 4: Brew Group Assembly | 2180-051

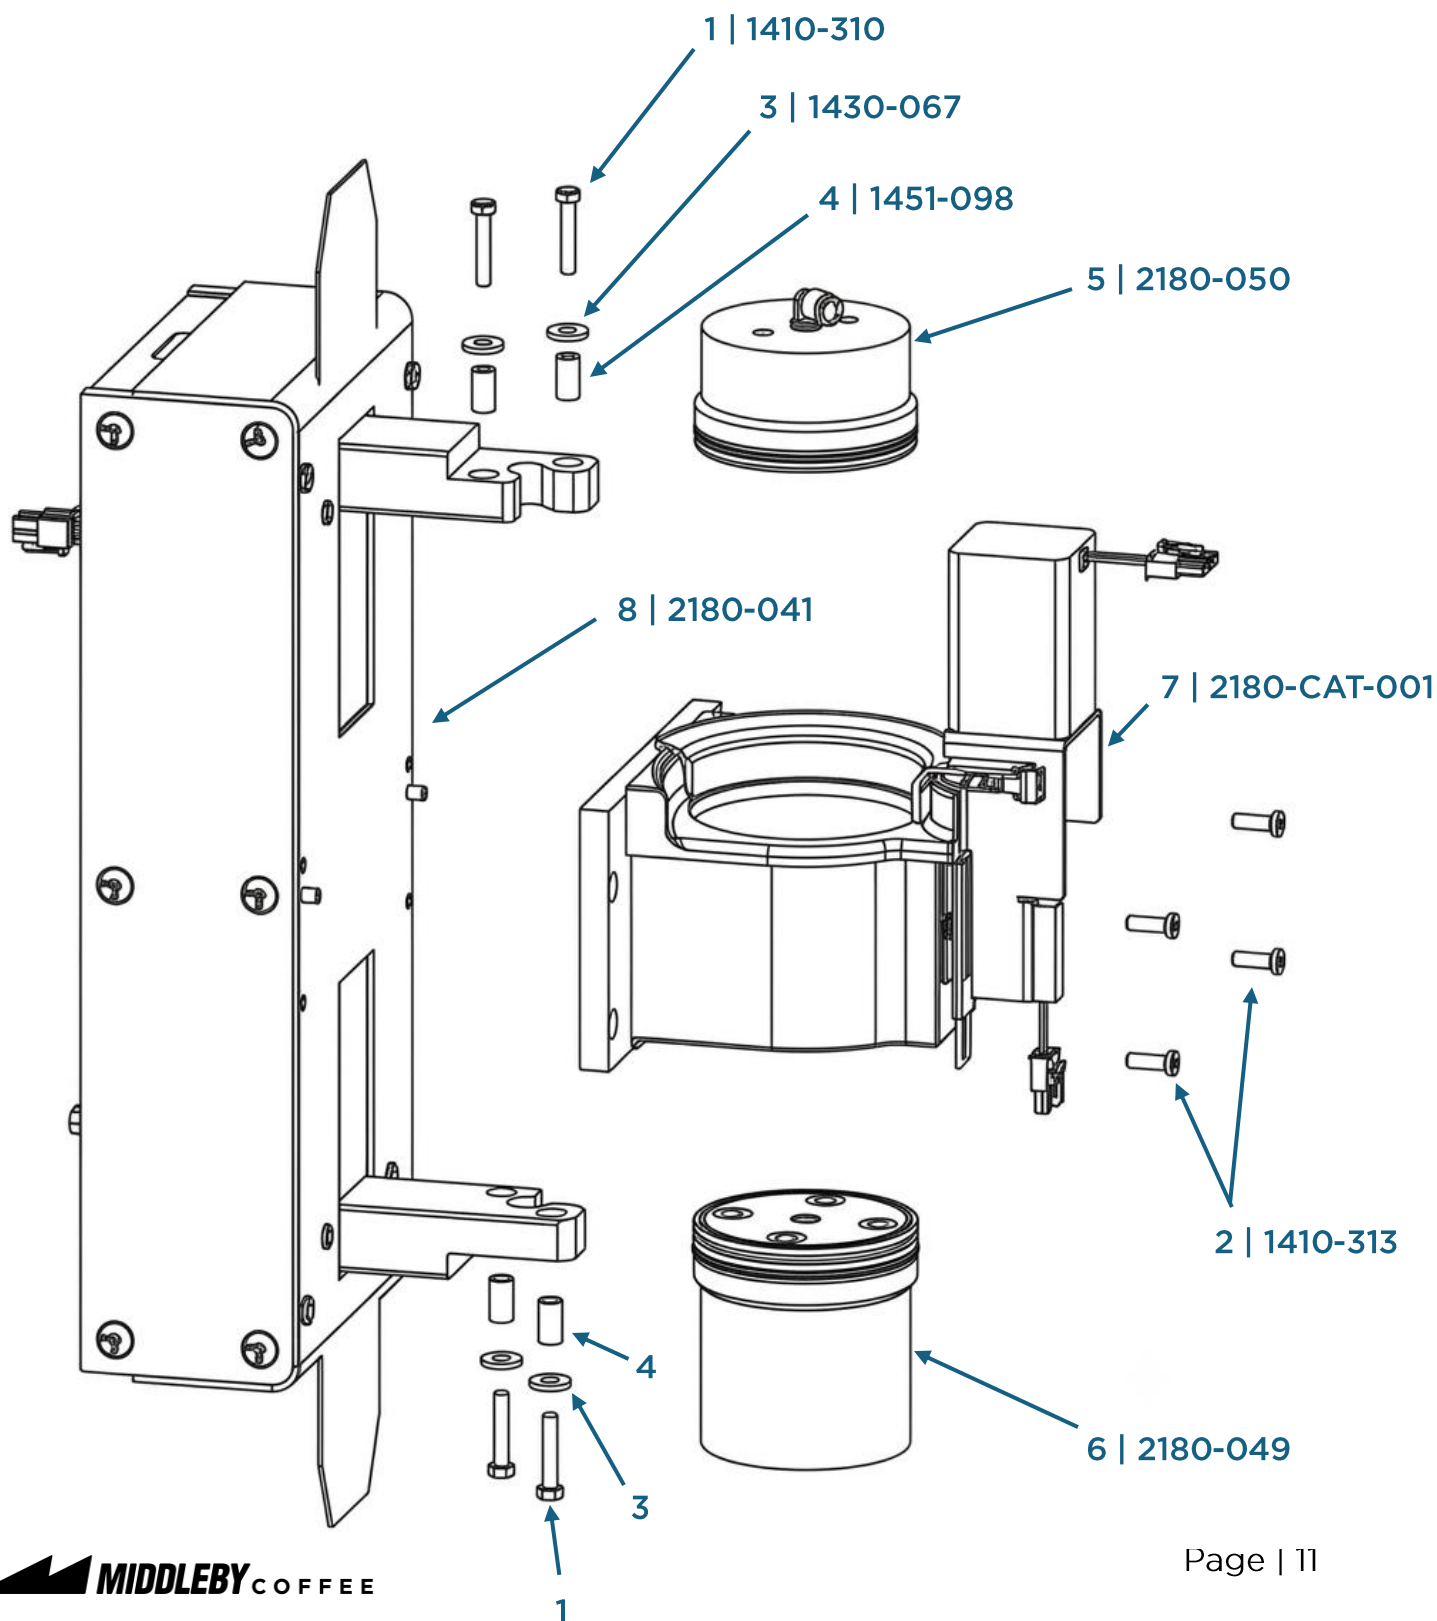

## Parts List 4: Brew Group Assembly

| Diagram<br>4 Item # | Description                             | Qty | Concordia<br>Part Number |
|---------------------|-----------------------------------------|-----|--------------------------|
| Assembly            | ASSY PEEK BREW GROUP SLVED AT W/ GUTTER | 1   | 2180-051                 |
| 1                   | HEX SS 10-32 X 1                        | 4   | 1410-310                 |
| 2                   | FH PHIL SS 10-32 X 5/8                  | 4   | 1410-313                 |
| 3                   | WASHER FLAT #10 .562OD                  | 4   | 1430-067                 |
| 4                   | SPACER AL 10-32 5.16ODX9.16             | 4   | 1451-098                 |
| 5                   | ASSY PISTON UPPER AT                    | 1   | 2180-050                 |
| 6                   | ASSY PISTON LOWER AT                    | 1   | 2180-049                 |
| 7                   | ASSY BREW CHAMBER AT                    | 1   | 2180-CAT-001             |
| 8                   | ASSY LINEAR DRIVE AT                    | 1   | 2180-041                 |


## Diagram 5: Brew Chamber Assembly | 2180-CAT-001

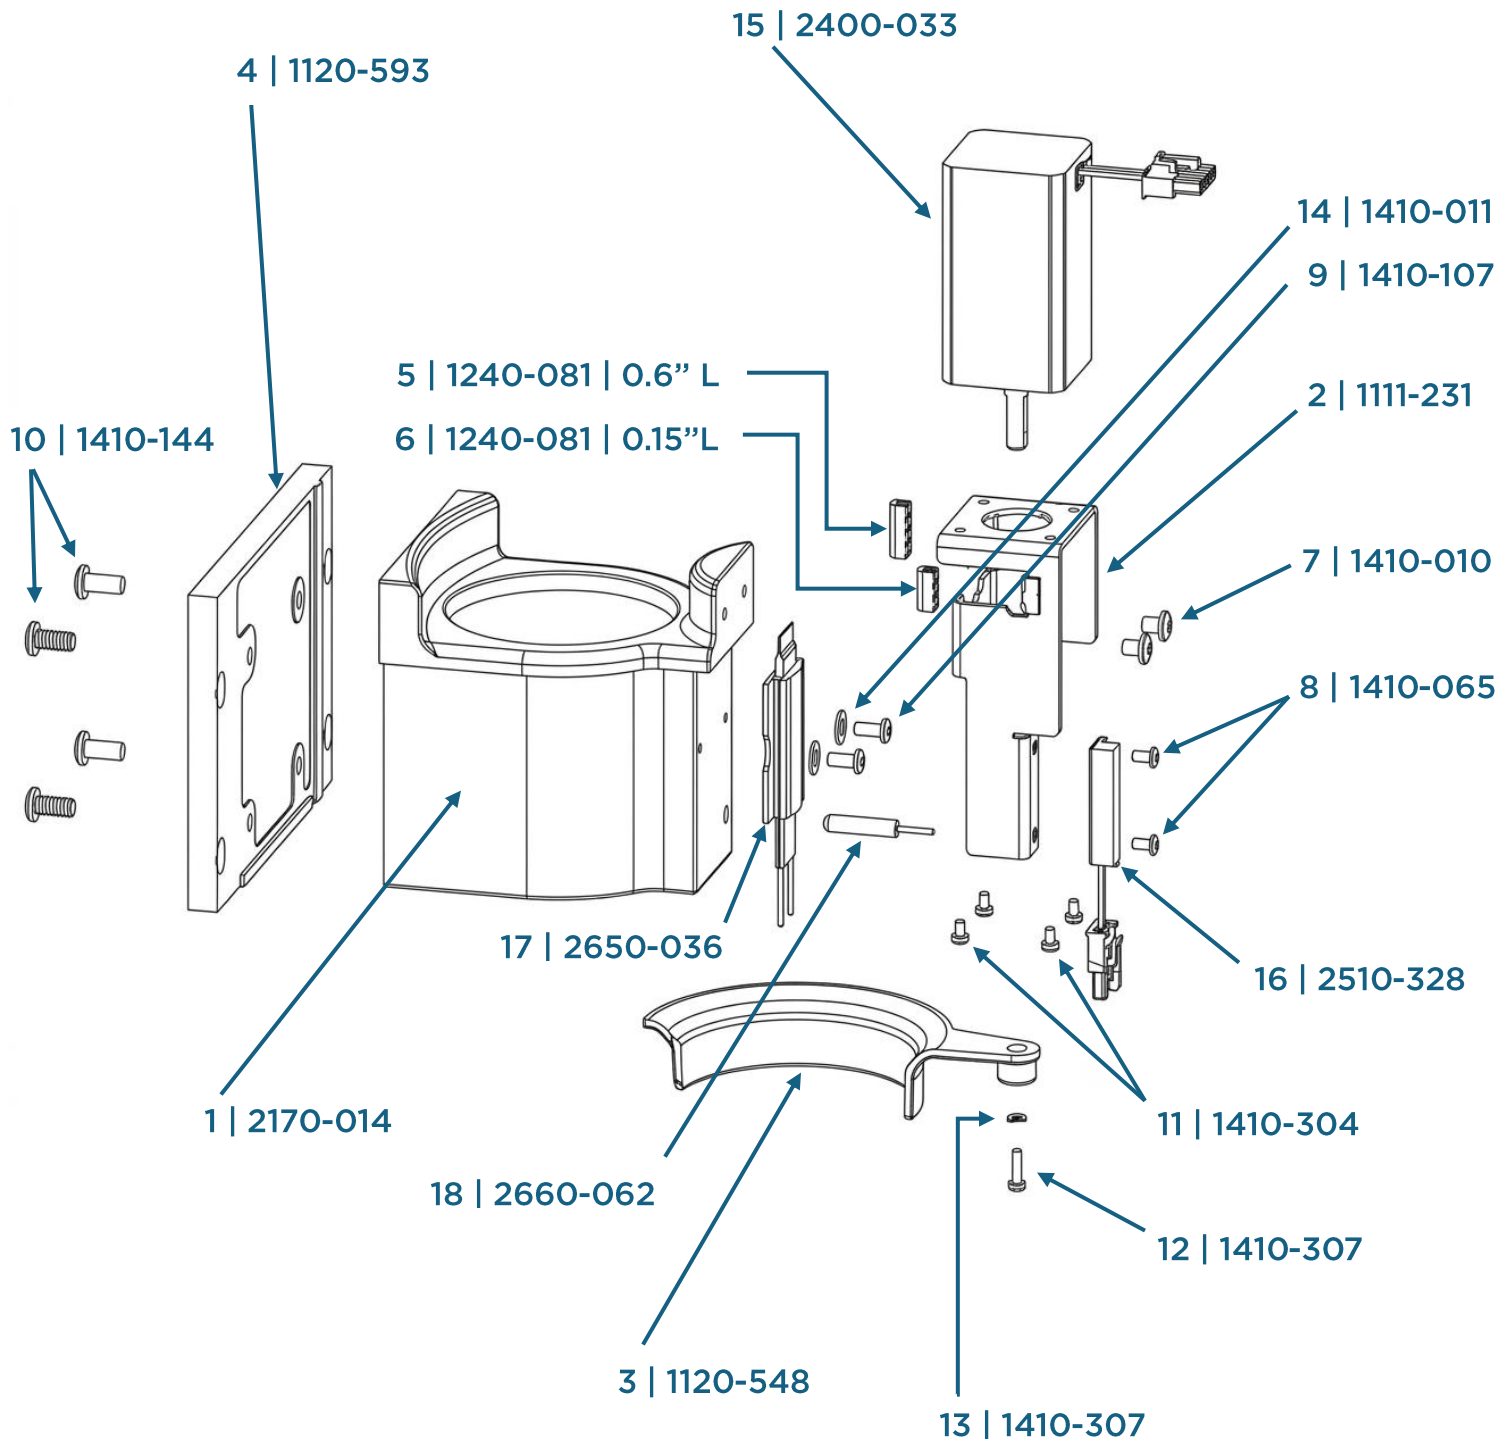

## Parts List 5: Brew Chamber Assembly

| Diagram<br>5 Item # | Description                              | Qty | Concordia<br>Part Number |
|---------------------|------------------------------------------|-----|--------------------------|
| Assembly            | ASSEMBLY BREW CHAMBER AT (Full Assembly) | 1   | 2180-CAT-001             |
| 1                   | ASSY BREW CHMBR W/GUTTER AT              | 1   | 2170-014                 |
| 2                   | MOTOR MNT SWP ARM AT                     | 1   | 1111-231                 |
| 3                   | ARM SWEEP AT                             | 1   | 1120-548                 |
| 4                   | PLATE CHAMBER GUTTER AT                  | 1   | 1120-593                 |
| 5                   | GROMMET EDGE .069 -.090, BY THE INCH     | 1   | 1240-081                 |
| 6                   | GROMMET EDGE .069 -.090 0.45IN           | 1   | 1240-081                 |
| 7                   | PH PHIL MS SS 8-32X1/4                   | 2   | 1410-010                 |
| 8                   | PH PHIL MS SS 4-40X1/4                   | 2   | 1410-065                 |
| 9                   | PH PHIL SS 6-32 X 3/8                    | 2   | 1410-107                 |
| 10                  | PH PHIL SS 10-32 1/2                     | 4   | 1410-144                 |
| 11                  | PH PHIL SS M3X4 NYP                      | 4   | 1410-304                 |
| 12                  | PH PHIL SS 4-40 X 3.75 NYP               | 1   | 1410-307                 |
| 13                  | WASHER FLAT SS #4                        | 1   | 1430-007                 |
| 14                  | WASHER FLAT SS #8                        | 2   | 1430-011                 |
| 15                  | MOTOR SWEEP ARM AT                       | 1   | 2400-033                 |
| 16                  | ASSY SWITCH MAG AT                       | 1   | 2510-328                 |
| 17                  | HTR GRP DBK HP05 1/14 12/24V             | 1   | 2650-036                 |
| 18                  | PROBE 3/16 X 1 L 24" LE.                 | 1   | 2660-062                 |


## Diagram 6: Upper Piston Assembly | 2180-050

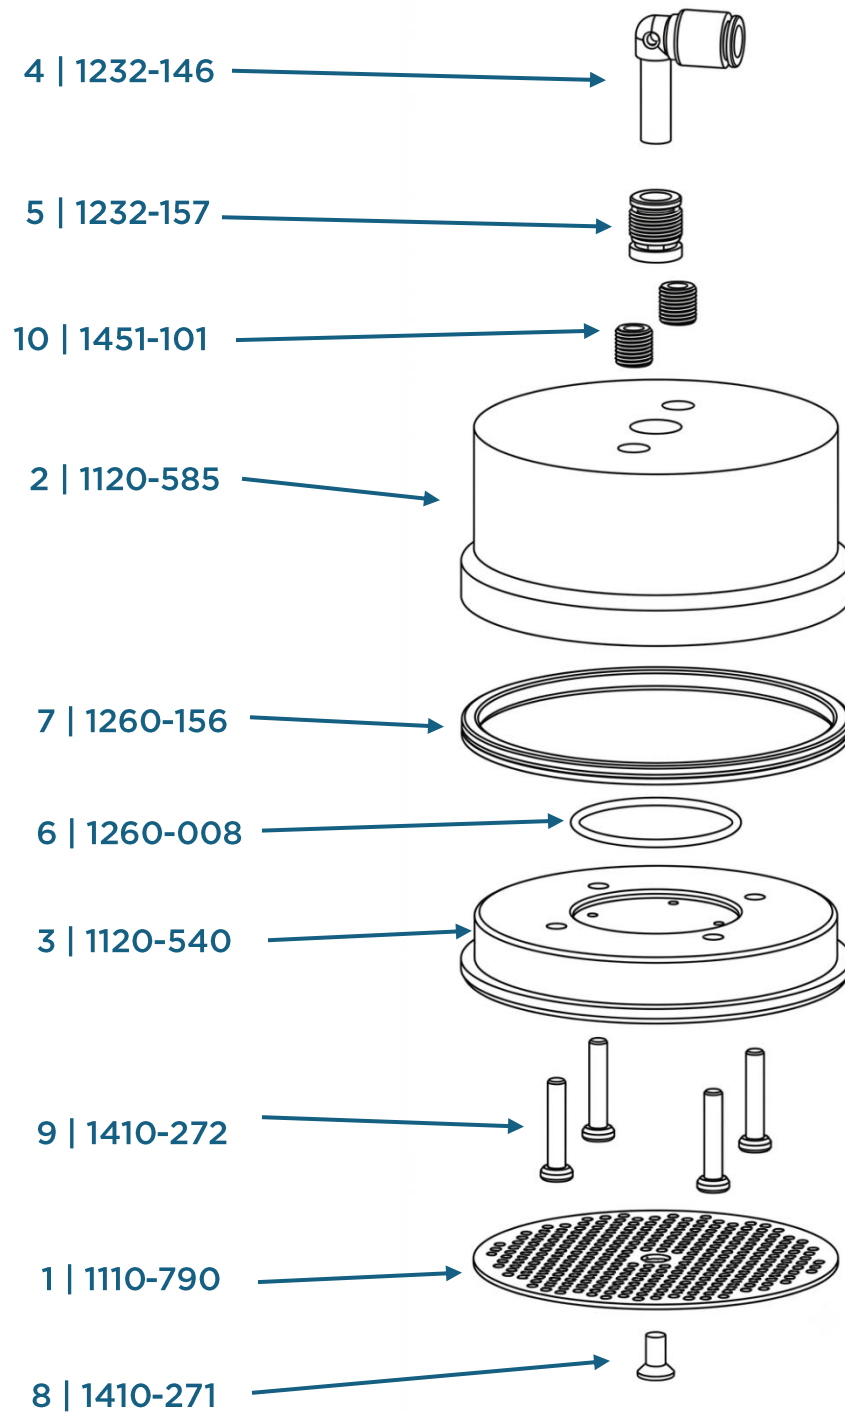

## Parts List 6: Assembly – Upper Piston

| Diagram<br>6 Item # | Description                       | Qty | Concordia<br>Part Number |
|---------------------|-----------------------------------|-----|--------------------------|
| Assembly            | Assy Peek Up Piston AT            | 1   | 2180-050                 |
| 1                   | SCREEN MICRO PISTON UPPER         | 1   | 1110-790                 |
| 2                   | PISTON UPPER UNFILLED PEEK AT     | 1   | 1120-585                 |
| 3                   | CAP PISTON UPPER UNFILLED PEEK AT | 1   | 1120-586                 |
| 4                   | ELBOW LEGRES 6MM M X 6 MM F       | 1   | 1232-146                 |
| 5                   | HALF CARTRIDGE 6MM                | 1   | 1232-157                 |
| 6                   | O-RING 2.025 EPDM                 | 1   | 1260-008                 |
| 7                   | SEAL RING PISTON                  | 1   | 1260-156                 |
| 8                   | FH-PHIL MA-07 X 8MM, SS           | 1   | 1410-271                 |
| 9                   | FH PHIL, W/O 6-32 X 3/4, 18-8SS   | 4   | 1410-272                 |
| 10                  | FEMALE THREAD OD 3X8X3/4L         | 2   | 1451-101                 |
| n/s                 | SPRING SS 3/16DX3/4L              | 2   | 1451-100                 |


## Diagram 7: Lower Piston Assembly | 2180-049

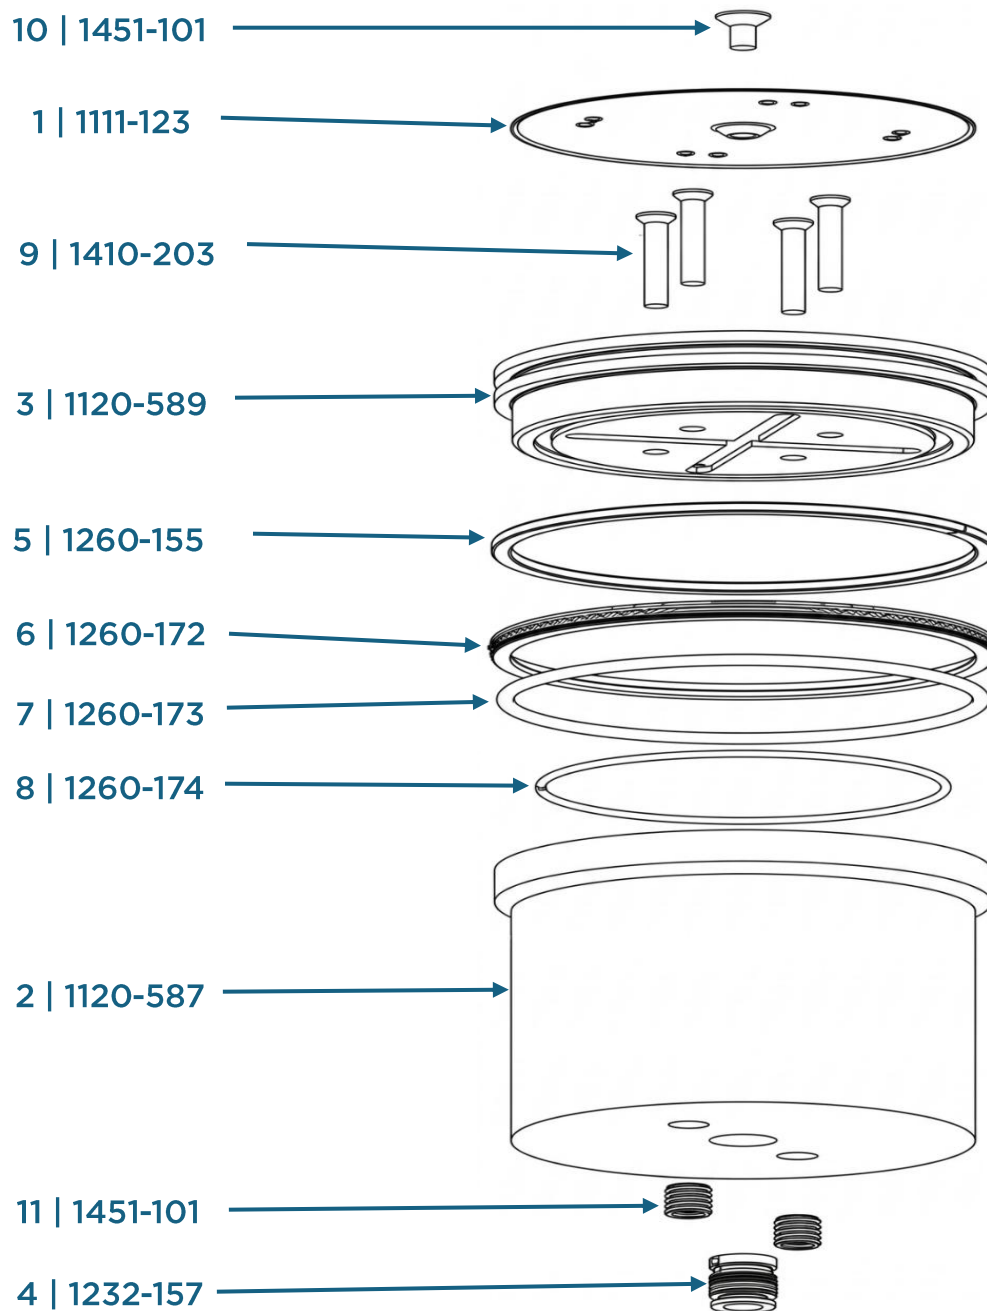

## Parts List 7: Lower Pison Assembly

| Diagram<br>7 Item # | Description                       | Qty | Concordia<br>Part Number |
|---------------------|-----------------------------------|-----|--------------------------|
| Assembly            | Assy Peek Lower Piston            | 1   | 2180-049                 |
| 1                   | SCREEN PISTON LOWER               | 1   | 1111-123                 |
| 2                   | PISTON LOWER UNFILLED PEEK AT     | 1   | 1120-587                 |
| 3                   | CAP PISTON LOWER UNFILLED PEEK AT | 1   | 1120-589                 |
| 4                   | HALF CART 6MM                     | 1   | 1232-157                 |
| 5                   | O-RING WIPER LWR PISTON           | 1   | 1260-155                 |
| 6                   | SEAL LOWER PISTON AT              | 1   | 1260-172                 |
| 7                   | O-RING 2-148 EPDM                 | 1   | 1260-173                 |
| 8                   | O-RING 2-036 EPDM                 | 1   | 1260-174                 |
| 9                   | FH PHIL, SS 6-32 X 1.5"           | 4   | 1410-203                 |
| 10                  | FH SS M4 X 8 MM-90 DEG            | 1   | 1410-271                 |
| 11                  | FEMALE THREAD OD 3X8X3/4L         | 2   | 1451-101                 |


## Diagram 8: Linear Drive Assembly

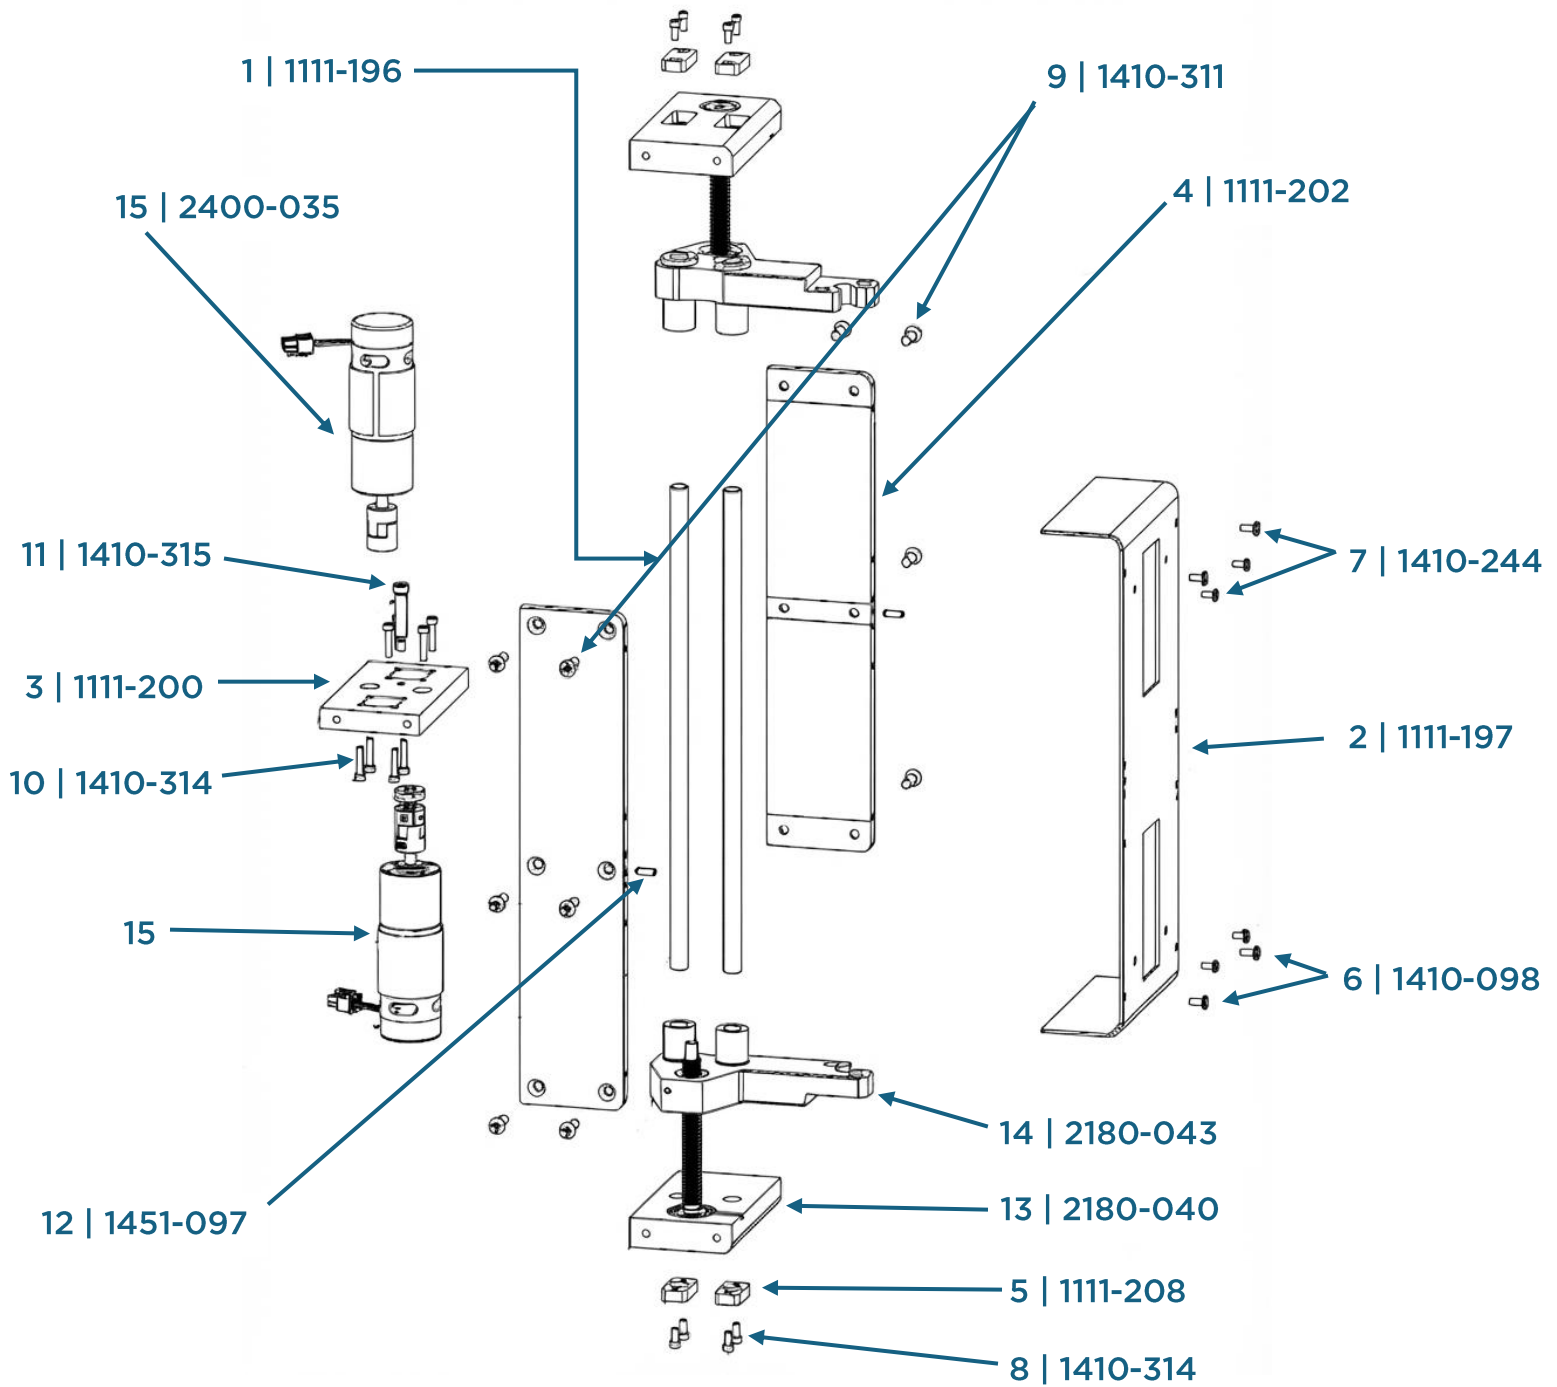

## Parts List 8: Linear Drive Assembly

| Diagram<br>8 Item # | Description                          | Qty | Concordia<br>Part Number |
|---------------------|--------------------------------------|-----|--------------------------|
| Assembly            | ASSY LINEAR DRIVE AT (Full Assembly) | 1   | 2180-041                 |
| 1                   | SHAFT GROUP AT                       | 2   | 1111-196                 |
| 2                   | PLATE WALL FRONT AT                  | 1   | 1111-197                 |
| 3                   | PLATE GROUP MOTOR AT                 | 1   | 1111-200                 |
| 4                   | PLATE GROUP SIDE                     | 2   | 1111-202                 |
| 5                   | PLATE SHAFT LOCATOR AT               | 4   | 1111-208                 |
| 6                   | PH PHIL SS M4 X 8                    | 4   | 1410-098                 |
| 7                   | PH PHIL SS 10-32 X 3/8               | 4   | 1410-244                 |
| 8                   | SOC CAP SS 8-32 X 3/8                | 8   | 1410-258                 |
| 9                   | FH PHIL SS 1/4 -20 X 3/4             | 12  | 1410-311                 |
| 10                  | SOC CAP SS M4 X 20                   | 8   | 1410-314                 |
| 11                  | SHLDR SS 5/16D X 1-1/4L              | 1   | 1410-315                 |
| 12                  | PIN DOWL SS 3/16D X 1/2 L            | 2   | 1451-097                 |
| 13                  | KEYED THRUST PLATE AT                | 2   | 2180-040                 |
| 14                  | KEYED PISTON ARM AT                  | 2   | 2180-043                 |
| 15                  | KEYED MOTOR AT                       | 2   | 2400-035                 |
| n/s                 | WASHER FLAT SS #6 X .312             | 4   | 1430-084                 |


## Diagram 9: Double Grinder Assembly | 2180-039

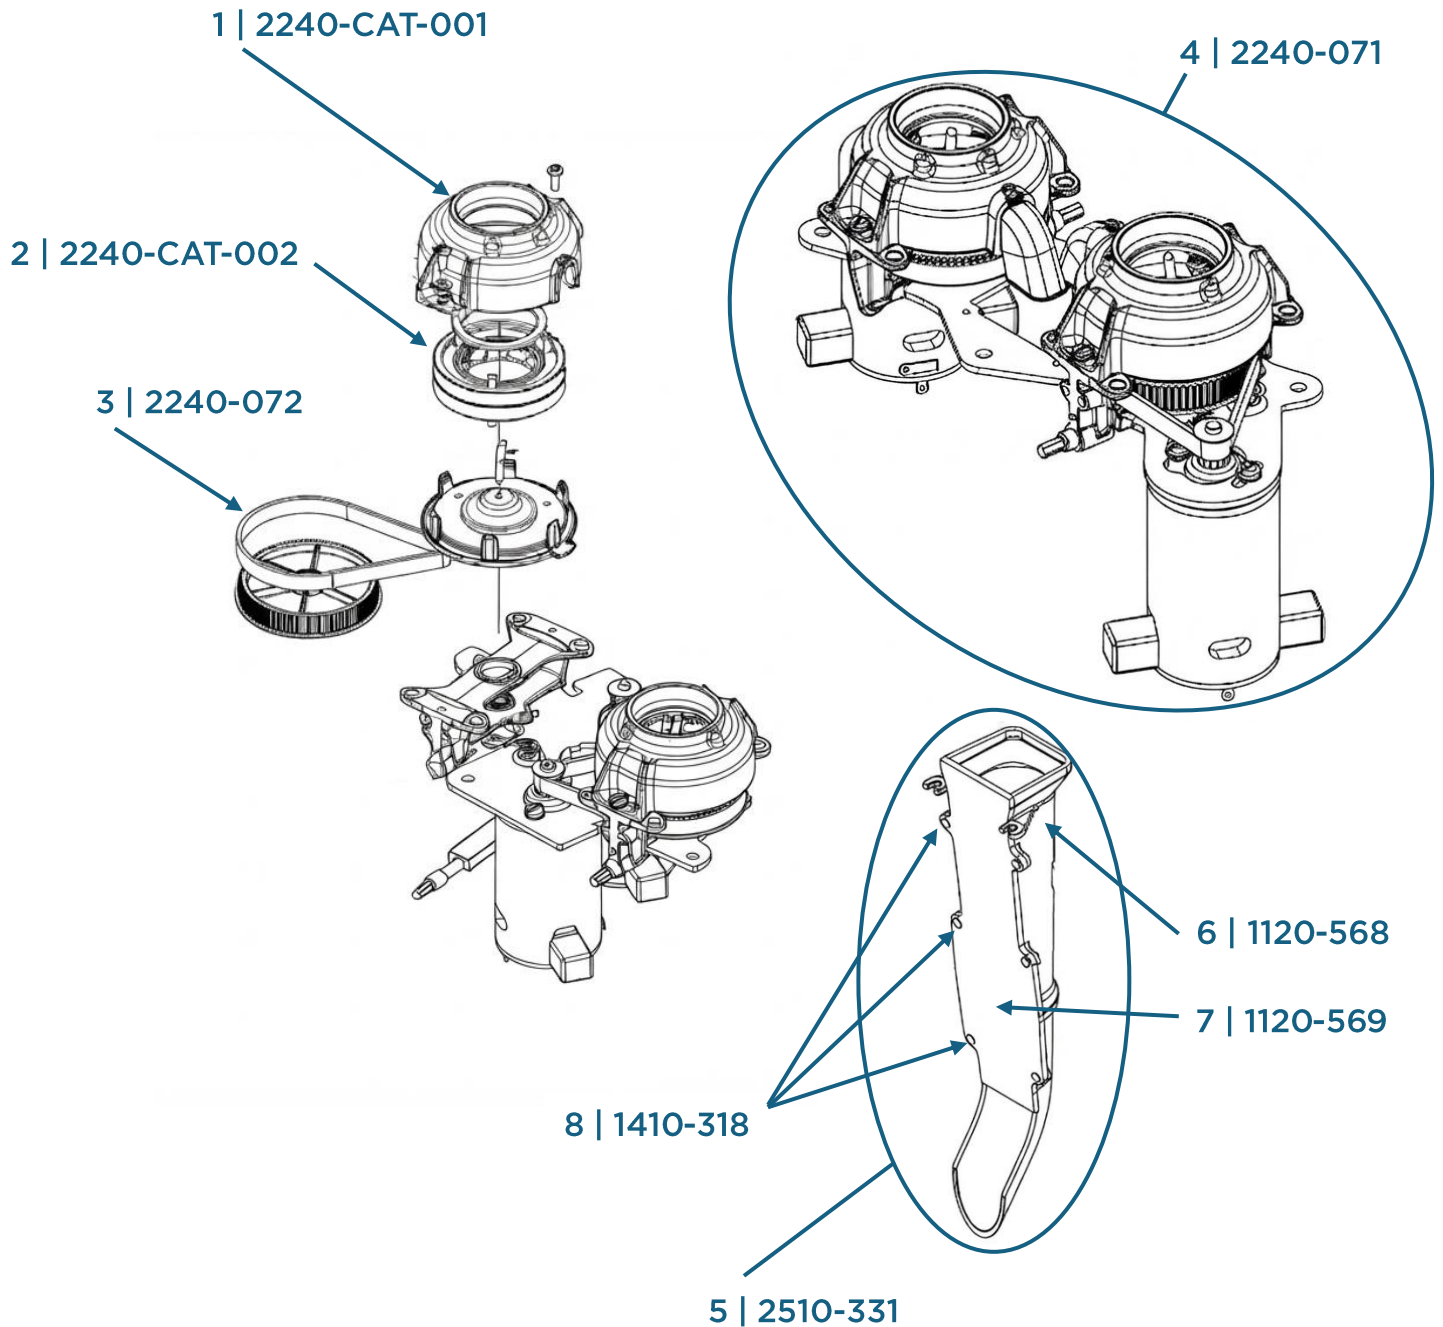

## Parts List 9: Double Grinder Assembly

| Diagram<br>9 Item # | Description                             | Qty | Concordia Part<br>Number |
|---------------------|-----------------------------------------|-----|--------------------------|
| Assembly            | ASSY GRINDER DOUBLE AT                  | 1   | 2180-039                 |
| 1                   | HOUSING AT GRINDER EK7                  | 2   | 2240-CAT-001             |
| 2                   | BURR SET AT GRINDER EK7                 | 2   | 2240-CAT-002             |
| 3                   | BELT DRIVE FOR AT GRINDER EK7           | 2   | 2240-072                 |
| 4                   | DUAL 230VDC EK7 GRINDER (Without Chute) | 1   | 2240-071                 |
| 5                   | ASSY CHUTE AT                           | 1   | 2510-331                 |
| 6                   | GROUND CHUTE AT                         | 1   | 1120-568                 |
| 7                   | GROUND CHUTE COVER AT                   | 1   | 1120-569                 |
| 8                   | SNAP RIVET 2.6MMX7.2MM                  | 6   | 1410-318                 |
| n/s                 | SNOUT GRINDER AT                        | 1   | 1120-575                 |
| n/s                 | SUPPRESSOR CHAFF AT                     | 1   | 1120-576                 |
| n/s                 | BRKT EK7 GRINDER SNOUT KIT              | 2   | 5000-CAT-001             |
| n/s                 | BRKT EK7 GRINDER SNOUT                  | 1   | 1111-279                 |
|                     |                                         |     |                          |

## Diagram 10: Water Pump Assembly | 2710-CAT-001

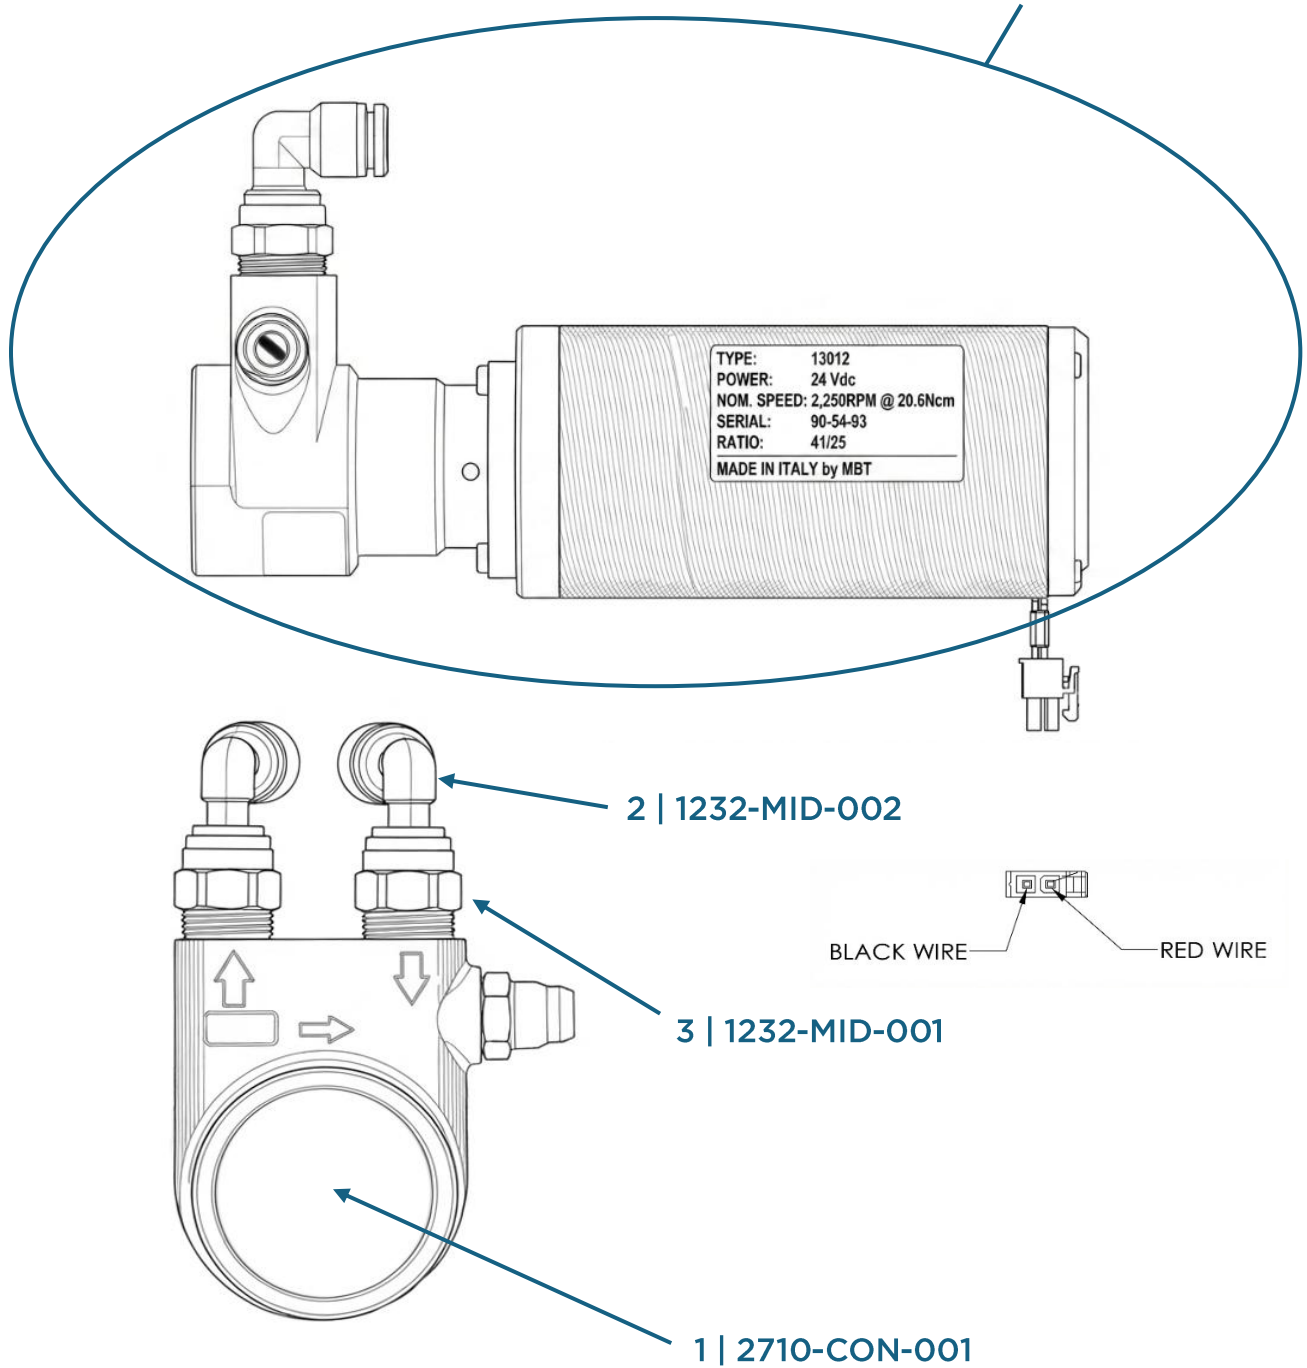


## Parts List 10: Water Pump Assembly

| Diagram<br>10 Item # | Description                       | Qty | Concordia Part<br>Number |
|----------------------|-----------------------------------|-----|--------------------------|
| Assembly             | ASSY WATER PUMP AT FLUID-O-TEC    | 1   | 2710-CAT-001             |
| 1                    | PUMP ROTARY WATER CON CONFIG-AT   | 1   | 2710-CON-001             |
| 2                    | CONN ELBOW 1/4 STEM X 6MM LEGRIS  | 2   | 1232-MID-002             |
| 3                    | CONN 1/4 NPTF MALE X 1/4 LEGRIS F | 2   | 1232-MID-001             |
| n/s                  | PUMP CLAMP 1-9/16MIN 2-1/2 MAX    | 1   | S1454-001                |
| n/s                  | KIT AT FLUID-O-TEC WTR PMP        | 1   | 5000-CAT-002             |

**NOTE:** The 5000-CAT-002 kit will upgrade you from the older style pump to the new style of pump


## Diagram 11: Hot Water Tank Assembly | 2720-071

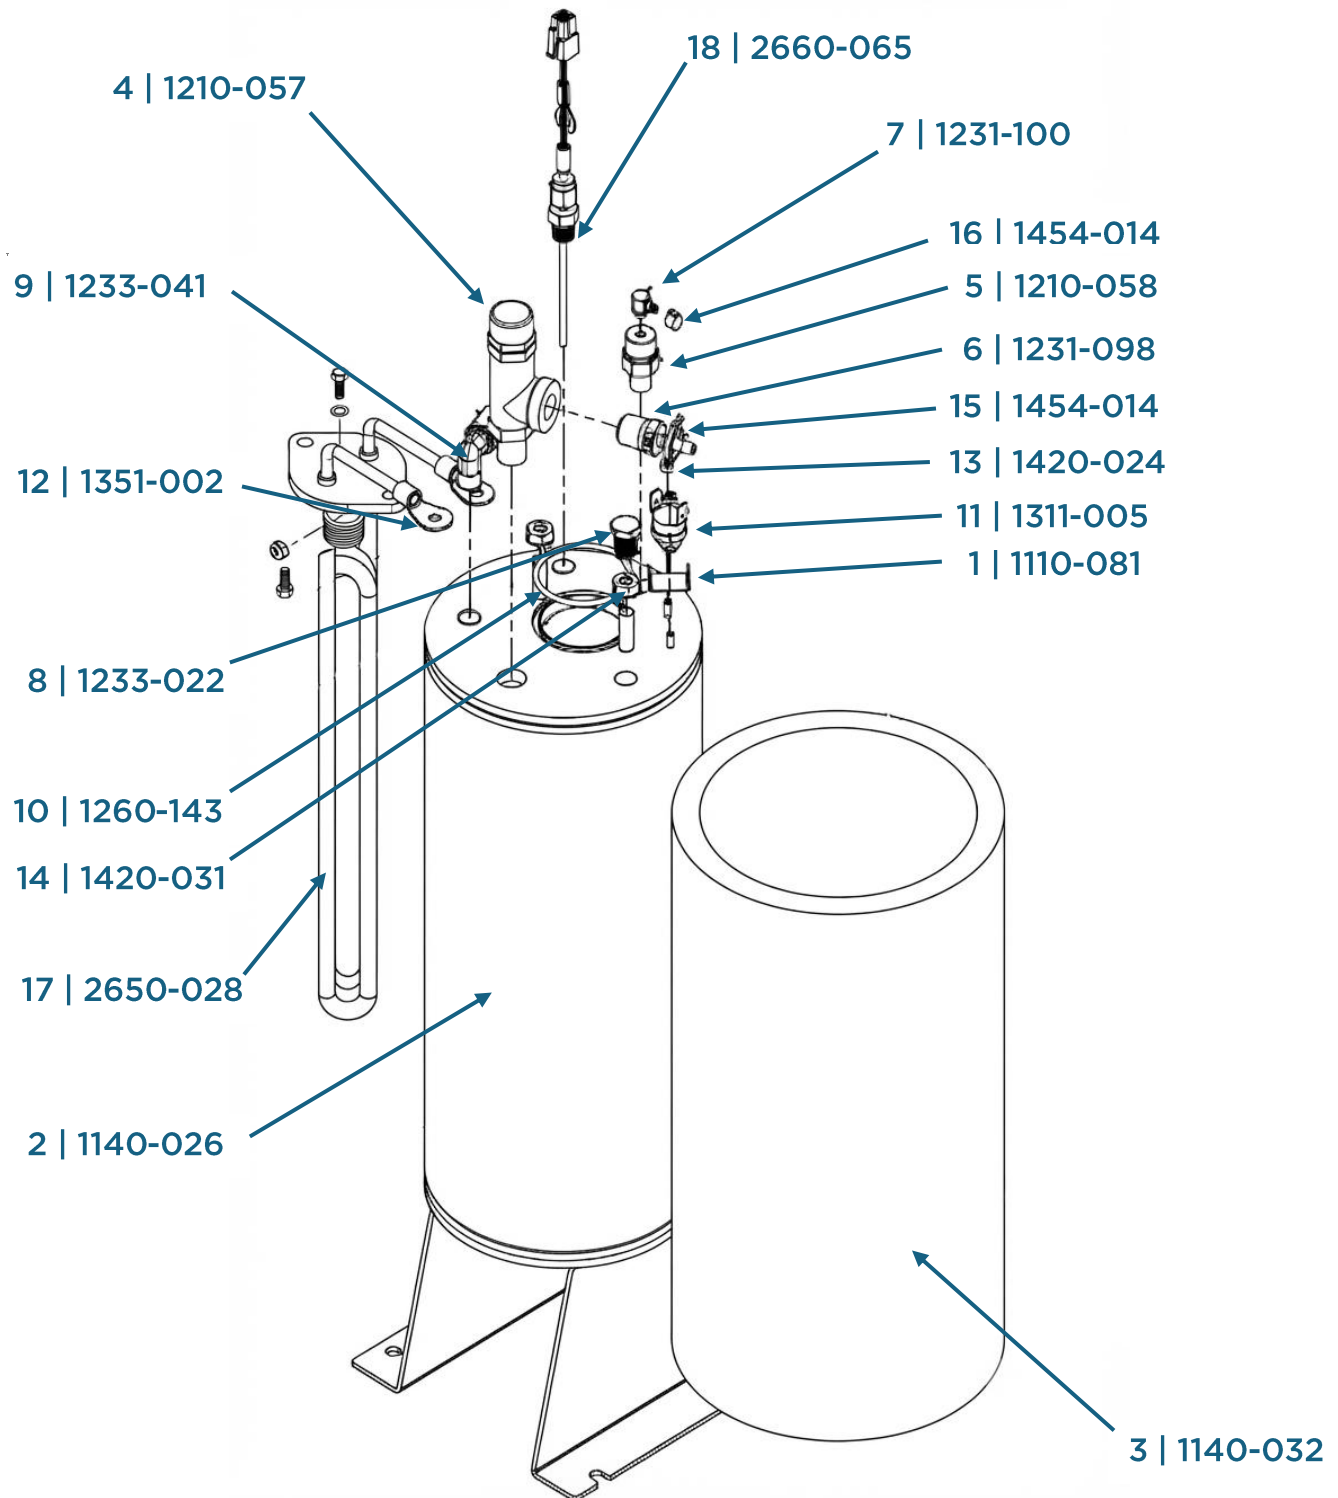

## Parts List 11: Hot Water Tank Assembly

| Diagram<br>11 Item # | Description               | Qty | Concordia<br>Part Number |
|----------------------|---------------------------|-----|--------------------------|
| Assembly             | ASSY TANK WATER AT        | 1   | 2720-071                 |
| 1                    | METAL FAB LIMITER SWITCH  | 1   | 1110-081                 |
| 2                    | TANK BREW WATER ASCENT    | 1   | 1140-026                 |
| 3                    | INSULATION WATER TANK AT  | 1   | 1140-032                 |
| 4                    | PRV 125 PSI AT            | 1   | 1210-057                 |
| 5                    | VLV SS EXPANSION 80PSI    | 1   | 1210-058                 |
| 6                    | CONN 3/16 BARB X 1/4NPT M | 1   | 1231-098                 |
| 7                    | ELBOW 3-32 BARB X 10-32   | 1   | 1231-100                 |
| 8                    | PLUG SS 1/8M              | 1   | 1233-022                 |
| 9                    | ELBOW SXL 1/8 NPT X 6MM   | 2   | 1233-041                 |
| 10                   | O-RING 2-130 5778-70 EPDM | 1   | 1260-143                 |
| 11                   | SW TEMP LIMIT 210F DEG    | 1   | 1311-005                 |
| 12                   | RING TERM #10 YELLOW      | 2   | 1351-002                 |
| 13                   | NUT KEP SS 4-40           | 2   | 1420-024                 |
| 14                   | NUT-HEX-KEP-1/4-20-SS     | 2   | 1420-031                 |
| 15                   | TY-RAP 8"                 | 1   | 1454-014                 |
| 16                   | CLAMP BIN DOOR .232 .275  | 1   | 1454-043                 |
| 17                   | ELEMENT HGT 4200W 208VAC  | 1   | 2650-028                 |
| 18                   | ASSY WATER/TEMP PROBE AT  | 1   | 2660-065                 |
| n/a                  | PRE TRA 150PSI ACTI       | 1   | 2720-073                 |
| n/s                  | TUBE PFA 1/8ID X 1/4 OD   | 21  | 1250-009                 |
| n/s                  | TUBE SLCN 3/16ID X 7/16   | 19  | 1250-025                 |
| n/s                  | TUBE PTFE 6MM X 4MM       | 20  | 1250-029                 |

## Diagram 12: Touchscreen Assembly | 2640-CAT-001

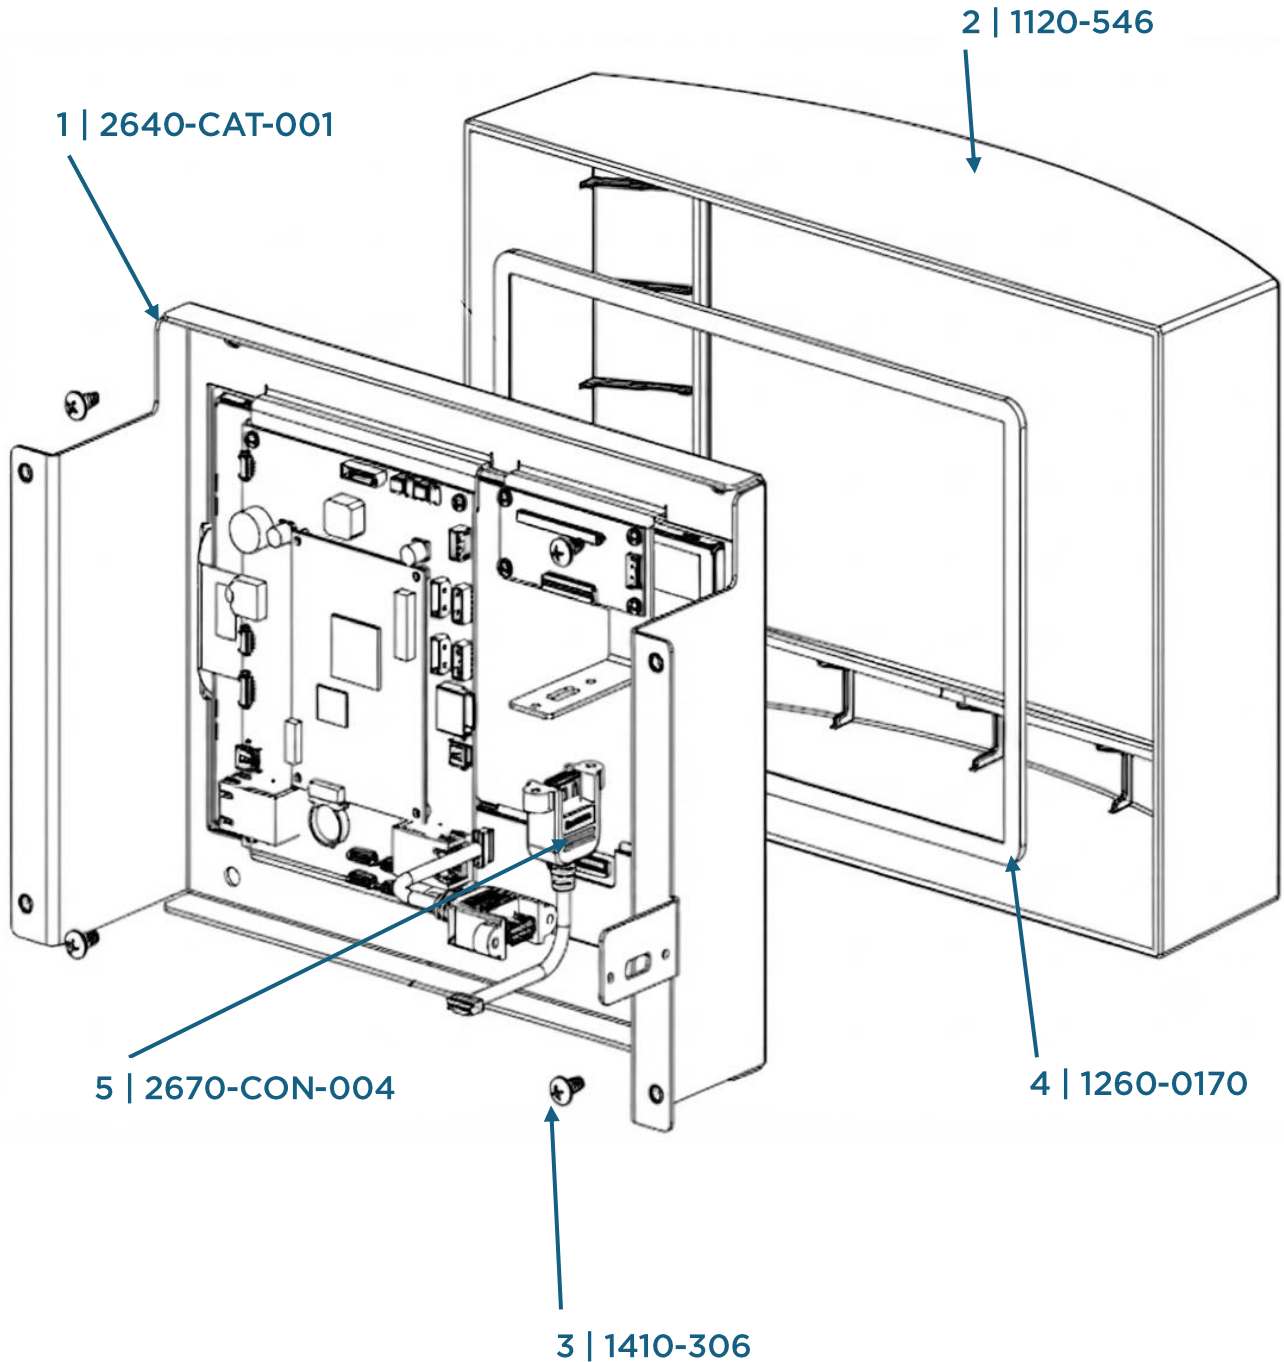


## Parts List 12: Touchscreen Assembly

| Diagram<br>12 Item<br># | Description                        | Qty | Concordia Part<br>Number |
|-------------------------|------------------------------------|-----|--------------------------|
| -                       | ASSY HLUI TOUCHSCREEN BRONZE       | 1   | 2510-CAT-004-01          |
| -                       | ASSY HLUI TOUCHSCREEN MATTE BLK AT | 1   | 2510-CAT-004-05          |
| 1                       | TOUCHSCREEN AT HLUI                | 1   | 2640-CAT-001             |
| 2                       | PANEL FRONT AT                     | 1   | 1120-546                 |
| 2(alt)                  | PAINT 1120-546 BRONZE              | 1   | 1400-033                 |
| 3                       | PH PHIL SS 10-14 X 3/8             | 4   | 1410-306                 |
| 4                       | GASKET SCREEN AT                   | 1   | 1260-170                 |
| 5                       | CBL USB HLUI                       | 2   | 2670-CON-004             |
| N/S                     | HRNSS BRL JCK POWER DISCONNECT     | 1   | 2670-CXI-022             |

**NOTE: 2640-CAT-001 Comes with a plate that will be covering the board.**

## Diagram 13: Electrical Assembly | 2600-002

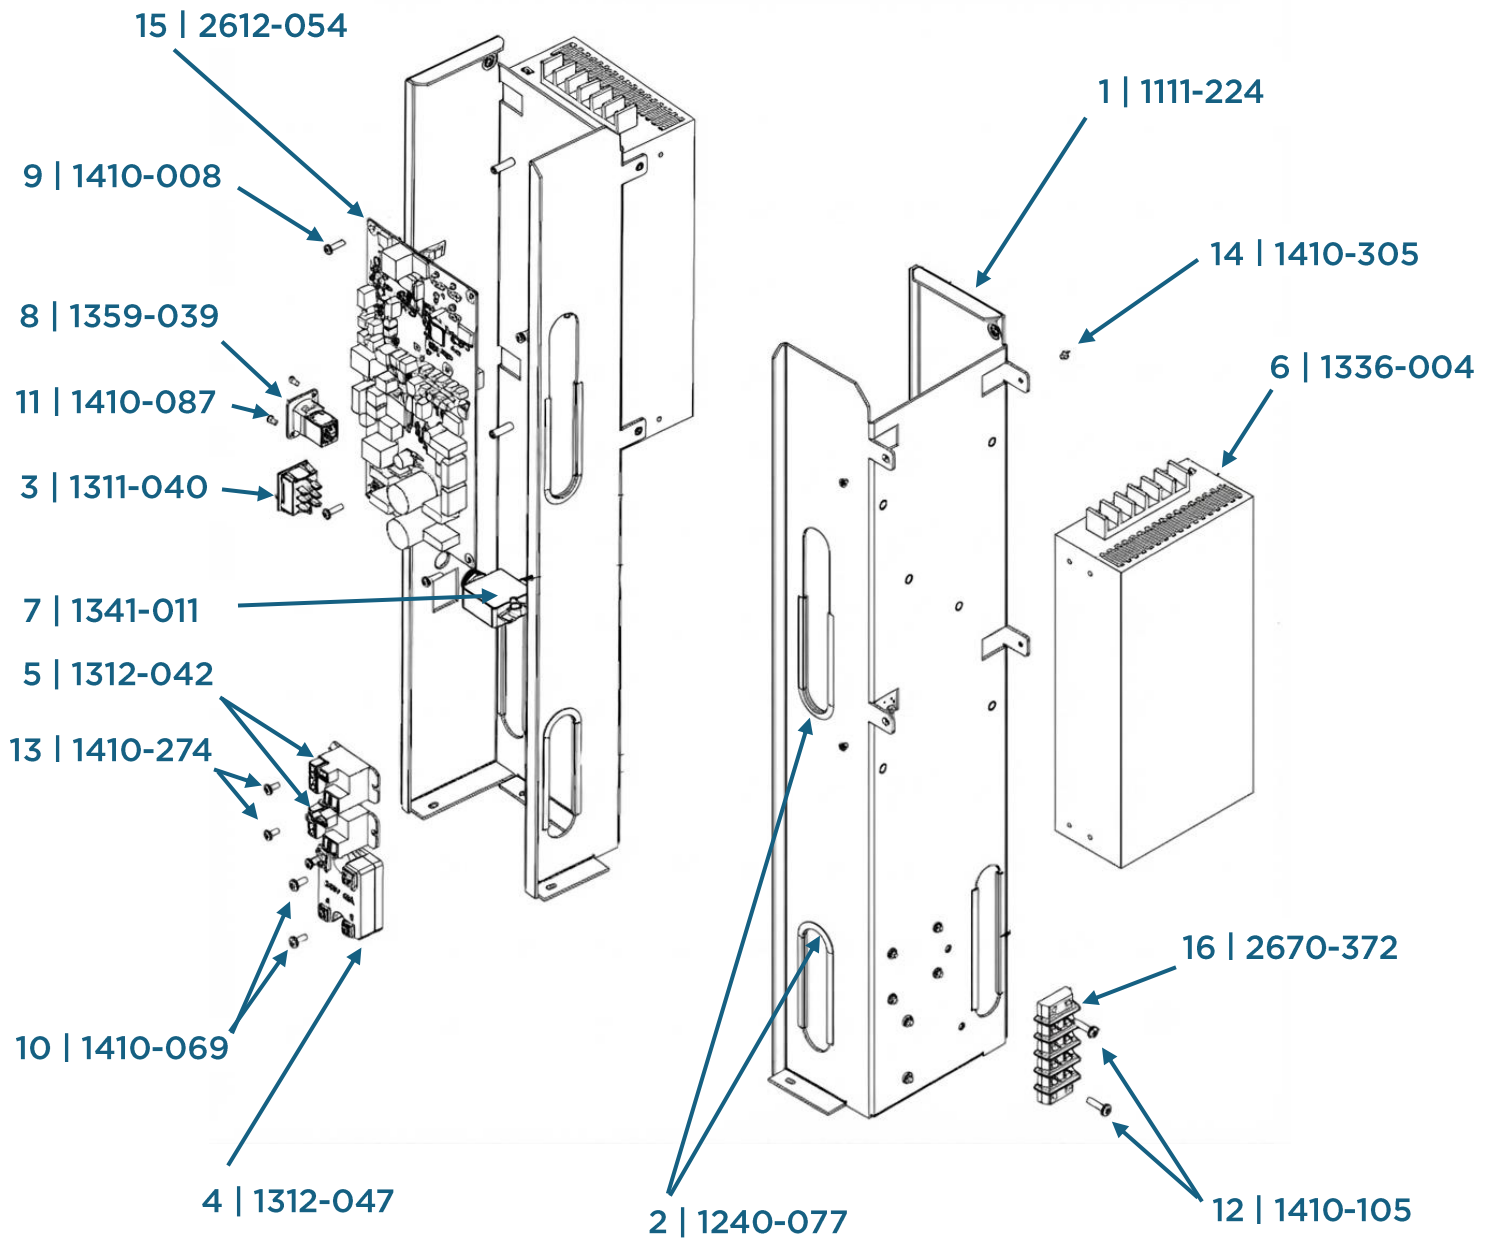

## Parts List 13: Assembly Electrical AT

| Diagram<br>13 Item # | Description                    | Qty | Concordia Part<br>Number |
|----------------------|--------------------------------|-----|--------------------------|
| Assembly             | ASSEMBLY ELECTRICAL AT         | 1   | 2600-002                 |
| 1                    | ENCLOSURE ELECTRIC AT          | 1   | 1111-224                 |
| 2                    | MOLDING EDGE 33.25 IN          | 1   | 1240-077                 |
| 3                    | SW MIN PWR                     | 1   | 1311-040                 |
| 4                    | RELAY SSR 60A 240V TUV         | 1   | 1312-047                 |
| 5                    | RELAY 30A SHUTOFF PWR          | 2   | 1312-042                 |
| 6                    | SUPPLY POWER OUTPUT 600W 24VDC | 1   | 1336-004                 |
| n/s                  | KIT AT PWR SPLY UPGRADE        | 1   | 5000-CAT-007             |
| 7                    | BRKR 10A CIRCUIT PSH-RLS       | 1   | 1341-011                 |
| 8                    | PNL MOUNT RJ45 TO RJ45 CONN    | 1   | 1359-039                 |
| 9                    | PH PHIL SS 6-32 X 1/2          | 6   | 1410-008                 |
| 10                   | PH PHIL MS SS 8-32 X 3/8       | 2   | 1410-069                 |
| 11                   | FH PH MS SS UCT 4-40 X 1/4     | 2   | 1410-087                 |
| 12                   | PH PHIL SS 8-32 X 5/8          | 2   | 1410-105                 |
| 13                   | PH PHIL SS 6-32 X 5/16         | 4   | 1410-274                 |
| 14                   | FH PHIL SS M3 X 4 NYP          | 4   | 1410-305                 |
| 15                   | PCA MACHINE CONTR AT           | 1   | 2612-054                 |
| 16                   | CBL HIGH VOLT AT               | 1   | 2670-372                 |
| n/s                  | HRNESS POWER SUPPLY AT         | 1   | 2670-382                 |
| n/s                  | HRNESS HTR RELAY CONTR AT      | 1   | 2670-380                 |
| n/s                  | BRKT PWR SPLY SPCR AT          | 2   | 1111-270                 |

## Part Warranty

### Limited Warranty Statement and Disclaimers

Concordia warrants the Goods to be free from defects in materials and workmanship under normal conditions for a period of ninety (90) days after the original date of shipment. Subject to the terms set forth herein. In the event of a failure of the Goods during the Warranty due to a defect in materials or workmanship, subject to the warranty exclusions set forth below, Concordia will arrange for the Goods to be replaced, without charge for part, during normal business hours (8:00 a.m. to 5:00 p.m., local time, Monday through Friday, except holidays).

THE FOREGOING WARRANTY REPRESENTS THE FULL EXTENT OF CONCORDIA'S LIABILITY WITH RESPECT TO THE GOODS. YOUR RIGHT TO PARTS AS SPECIFIED ABOVE IS YOUR SOLE AND EXCLUSIVE REMEDY AGAINST CONCORDIA. IN NO EVENT SHALL CONCORDIA BE LIABLE FOR DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, ARISING FROM OR RELATING TO THE SALE OR USE OF THE GOODS, EITHER DURING OR AFTER THE TERM OF WARRANTY.

This warranty does not cover cost of part made or attempted by anyone other than Concordia-authorized personnel. In the event of such unauthorized repairs, Concordia will void the warranty. In addition, this warranty does not apply if Concordia determines whether a problem resulted from inadequate or improper maintenance, improper operations, unauthorized alterations or adjustments, or use of unapproved supplies.

The above includes, but is not limited to the following:

- Evidence of improper maintenance, as outlined in the User Guide, not being followed.
- Lack of Preventive Maintenance, as defined in the User Guide.
- The Goods not being cleaned, maintained, and operated in accordance with instructions, as defined in the User Guide.
- Evidence that Concordia cleaning supplies and procedures are not used.
- Internally affected or damaged components caused by poor water conditions, including water exceeding three grains of hardness per gallon.
- Jammed or impacted coffee grinder caused by foreign object in grinder, or improper cleaning of the grinder.

- Plumbing issues [to include but not limited to plugged drains or insufficient water supply].
- Installation of other equipment that affects operation of Concordia equipment.
- Consumable parts and wear items [to include, but not limited to O-rings, rollers, guide rings, air filters, and water filters].
- Inoperative brew group due to improper maintenance or cleaning.
- Incorrect or insufficient power supply.
- Necessary recalibration due to customer preferences [to include, but not limited to type of coffee, size of cup, etc.].
- Relocation of the Goods from the originally installed location.

EXCEPT FOR THE ABOVE WARRANTY, CONCORDIA DISCLAIMS AND MAKES NO PERFORMANCE REPRESENTATIONS, WARRANTIES, GUARANTEES, OR CONDITIONS, EITHER EXPRESS OR IMPLIED, ORAL, OR WRITTEN, WITH RESPECT TO THE GOODS OR ANY SERVICES PROVIDED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY, GUARANTEE, OR CONDITION (A) OF MERCHANTABILITY, (B) OF FITNESS FOR A PARTICULAR PURPOSE, OR (C) ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING, OR USAGE OF TRADE. IN NO EVENT SHALL CONCORDIA'S LIABILITY EXCEED THE AMOUNT OF THE PURCHASE PRICE FOR THE GOODS.

SEATTLE BUILT

